Ages 8 and up.
Asst. #26610

TAMATOWN™ by Tamagotchi®

QUICK

Visit TamaT

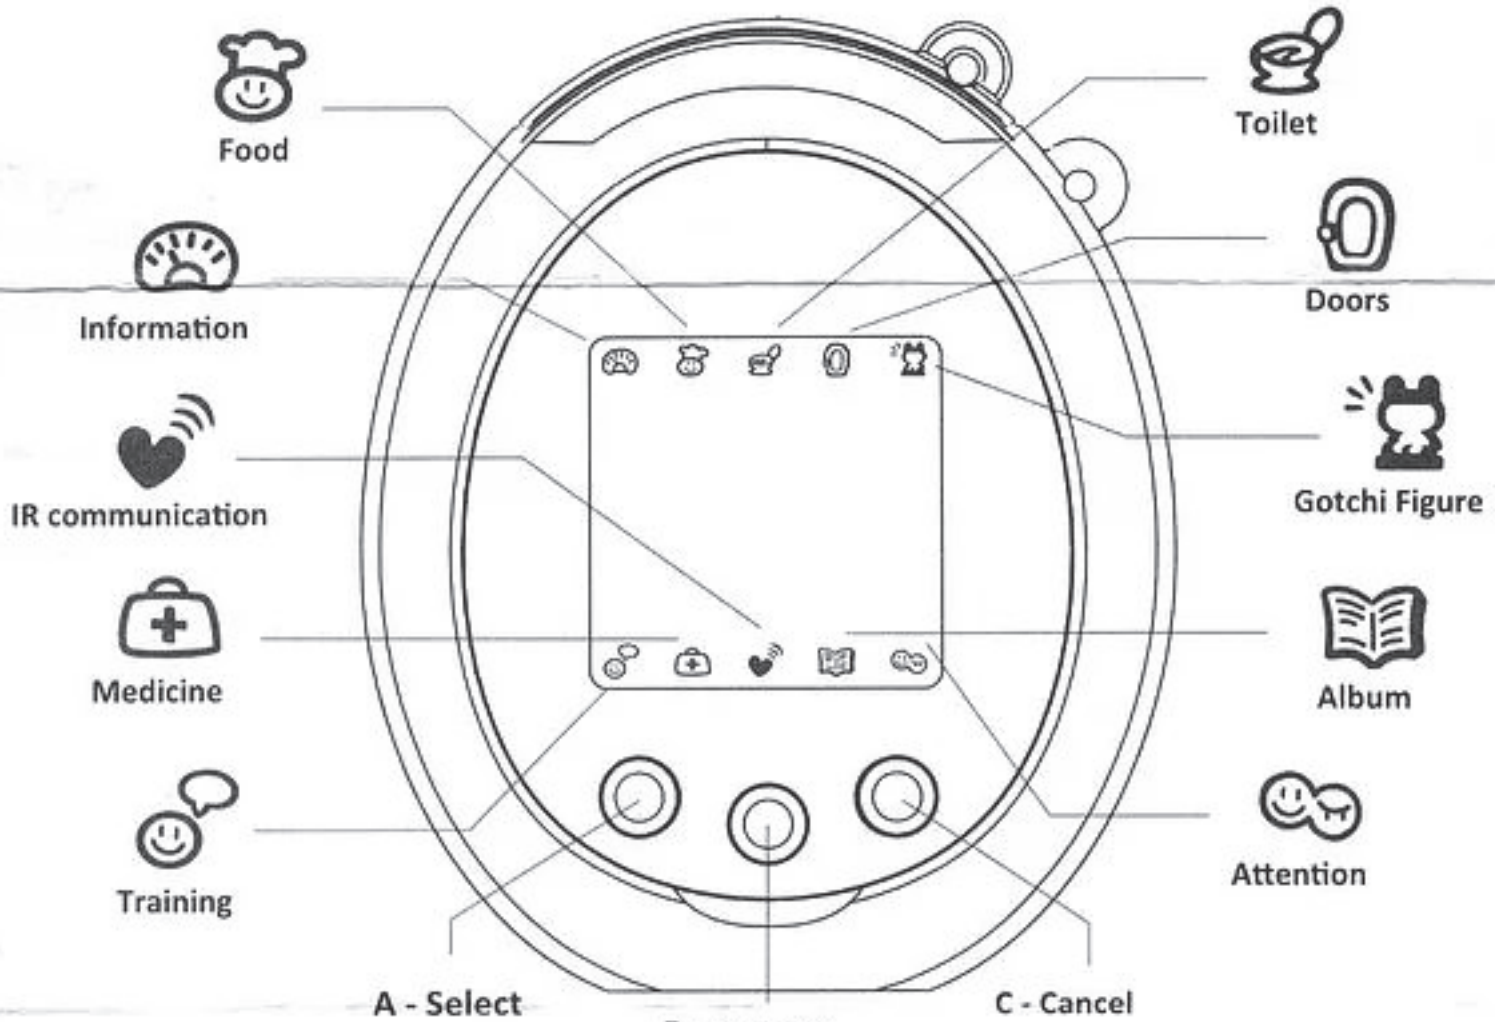

Information:
Your Tama Character's information gender, age, weight, generation, hungry, happy, train, friendship, # of your Gotchi Character and Gotchi points.

Food:
Choose a meal or snack to feed your Tama Character.

Toilet/Flush:
When your Tama Character makes a mess, you must clean it up!

Medicine:
When your Tama Character is sick, give her/him medicine to make her/him better.

IR Communication:
Tama-Go can play games with other Tama-Go's, Tamagotchi Music Star & V5.

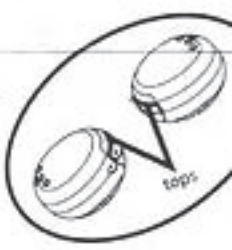

Album:
Your Tamagotchi friends are registered when you connect through IR communication.

Training:
Choose Time Out or Praise to train your Tama Character. When your Tama Character is bad, send it to Time Out.

Attention:
Will be lit when your Tama Character needs your help. Select this to communicate with your Tama Character.

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypres
exclusive property of Bandai. © Bandai, WiZ 2004-2010. All Rights Reserved.

Tama-Go™ QUICK START GUIDE

Visit TamaTown.com for complete instructions.

⚠CA

- **Do not:** 1) aim toy
  4) swing toy at ar
- **Be careful** not to

CAUTION: Keep
mix old and new

Toilet

Doors

Gotchi Figure

Album

Attention

GOTCHI FIGURES

Connect to your Tama-Go. Play games and shop.
Included character unlocks 1 game: Cradles

How to Play:

Button (A) Move Left

Button (B) Drop

Button (C) Move Right

Cradles

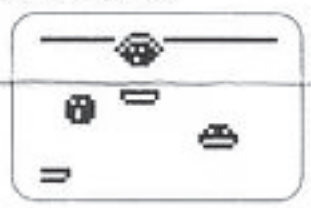

Slide Gotchi Character into the Tama-Go.™

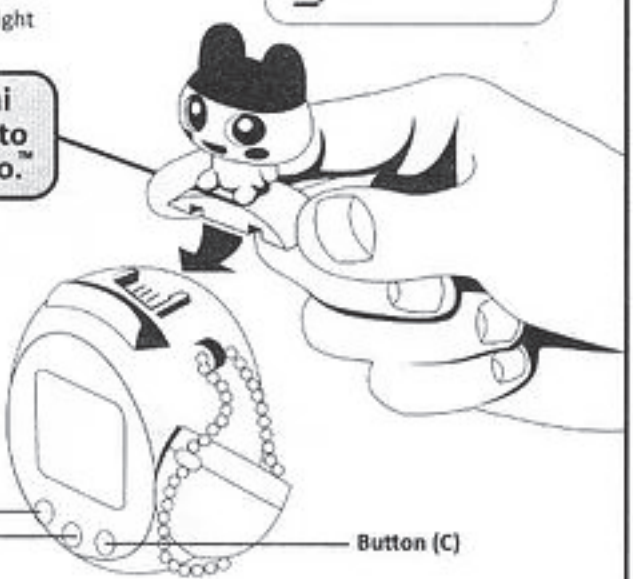

*Additional Figures are sold separately.

ry,

m better.

V5.

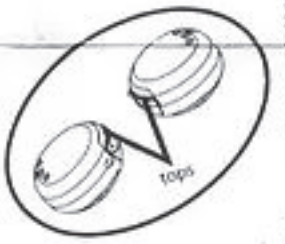

a

Doors:

Takes you to Games, Shop, Park, PC, and Dating Place.

Games

Earn Gotchi Points!

Shoot The Bugs!

Button (A) To change direction
Button (B) To shoot

Long Jumper

Button (B) To Keep jumping to the next box

PC

You can get a password to login/logout to/from tamatown.com.

How to login and logout:

1. Enter the amount of money you want to bring in.
2. Use the login password to login to TamaTown.com.
3. Enter the logout password to logout from TamaTown.com.
   - *When you cancel after obtaining a login password, you will lose points you were bringing to website.*

Park

You can go to the park and meet other Tama Characters.

Shop

You can go buy food for your Tama Character or remodel their room. (Requires Gotchi Points)

Dating Place

When your Tama Character becomes an adult, you can go to the Dating Place to get married.

Katella Avenue, Cypress, California 90630. TM & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CO

AUTION: PLEASE READ BEFORE PLAYING WITH TOY

y at anyone, 2) hit anyone with toy, 3) poke anyone with toy,
anyone, 5) step on toy.
o pinch fingers with hinged parts of toy.

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

ep batteries away from children. Batteries may be harmful if swallowed. Requires 2 AAA batteries. Batteries not included. NOTE: Do not w batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Dispose of used batteries properly.

HOW TO WAKE YOUR TAMAGOTCHI

Changing Batteries.

1. Using a screwdriver, remove the back of the Tamagotchi; place 2xAAA batteries into Tamagotchi. Replace back and insert screw.
2. To set the date and time, press button (B), day and time screen will appear. Set the date, month, hour and minute by using button (A) to select and button (B) to execute.
3. Set your birthday month/date. Your Tamagotchi might celebrate your birthday.
4. Enter your name (up to 8 letters) by using button (A) to select and button (B) to execute.
5. After returning to the main screen, you will find an egg that will become your Tama character. Product may take up to 5 seconds to reset.

HOW TO PAUSE YOUR TAMAGOTCHI

1. Press button (A) and button (B) together to pause/resume.

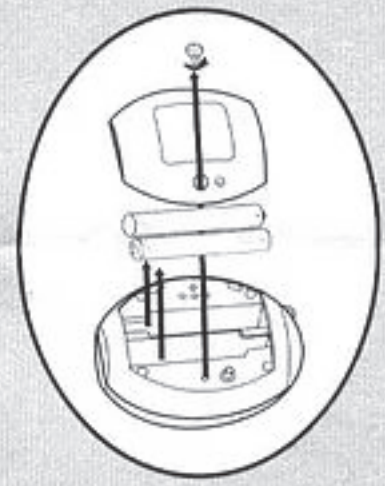

HOW TO RESET YOUR TAMAGOTCHI

1. Press reset button on back.
2. Follow "How to wake your Tamagotchi". Product may take up to 5 seconds to reset.

HOW TO CHANGE THE TIME

1. Press button (B) to view current time.
2. Press and hold button (A) and (C) together until date begins to flash. Use button (A) to select and button (B) to choose/set. **Caution:** You can check your birthday but you cannot change your birthday.

HOW TO SET THE CONTRAST

1. Press button (B) and button (C) together
2. Press button (A) to low and (B) to high

IMPORTANT BATTERY INFORMATION

- Use only new batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries.
- Please respect the correct polarity, (+) and (-).
- Do not throw batteries into the fire.
- Replace all batteries of the same type/brand at the same time.
- The supply terminals are not to be short-circuited.
- Remove exhausted batteries from the toy.
- Batteries should be replaced by adults.
- Remove batteries when not in use or discharged.
- Do not use rechargeable batteries.
- Dispose of batteries properly.

FC This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: •Reorient or relocate the receiving antenna. •Increase the separation between the equipment and receiver. •Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

ONNECTION, TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the

BANDAI

Ages 8 & up

⚠ CAUTION !

- Read the instruction sheet carefully.
- Do not give this item to a children who is under the recommended age.
- This product contains small parts such as battery cover and screws that may cause suffocation if swallowed by children.
- Small parts may be swallowed by children. Do not pass this product to children below 3 years old.
- Batteries should be replaced by adults. Replace all the batteries of the same tyle/brand at the same time.
- Do not swallow small parts like batteries, battery cover & screws.
- Swallowing dry cell batteries is extremely dangerous. Please keep batteries away from children. In case that batteries are swallowed, please go to see a doctor for help.
- Do not mix old and new batteries, different types o Do not use rechargeable batteries.
- Please respect the correct polarity, (+) and (-).
- Do not recharge, decompose, heat, or dispose of b
- Remove batteries when not in use or discharged.
- Avoid rough use such as knocking the product or s
- Contents may vary from photos and illustrations sh
- Ages 8 & up.
- Requires 2 AAA batteries. Battery not included.

TAMATOWN™

Tama-Go®

by Tamagotchi®

© BANDAI, WIZ/TV TOKYO, 2009 Team TAMAGOTCHI TV

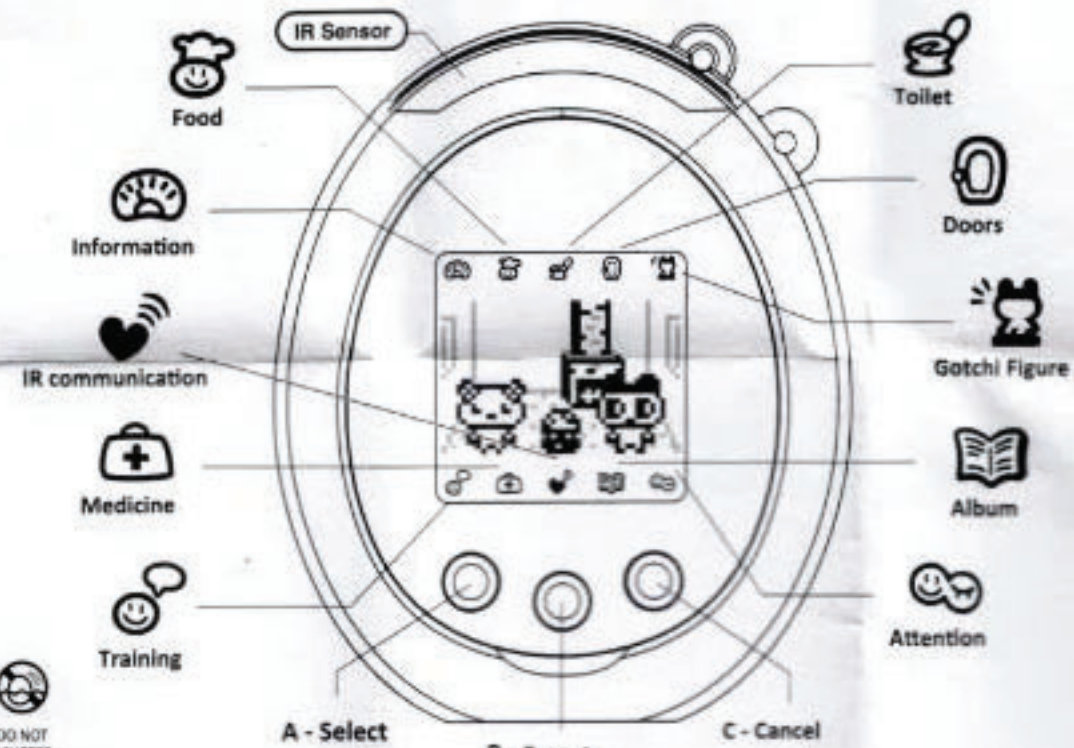

DO NOT IMMERSE IN WATER

1

Tamagotchi Tama-Go™ is an interactive virtual pet that will evolve di well you take care of it. Play games with it, feed and cure it when it is a good companion!

HOW TO WAKE YOUR TAMAGOTCHI

1. Using a screwdriver, turn the screw counter clockwise to loosen. Remove back and place the 2 AAA batteries as shown. Replace back and turn the screw clockwise.
   NOTE: Make sure you use new batteries. Please respect the correct polarity, (+) and (-).
   CAUTION : Keep batteries away from children. Batteries may be harmful if swallowed.
2. To set the date and time, press button (B), day and time screen will appear. Set the month, date, hour and minute by using button (A) to select and button (B) to execute.
3. Set your birthday month/date. Your Tamagotchi might celebrate your birthday.
4. Enter your name (up to 8 letters) by using button (A) to select and button (B) to execute.
   NOTE : After choosing your birthday and user name, you cannot change them.
5. After returning to the main screen, you will find an egg that will become your Tama character. It takes about 5 seconds to start up.

THE GROWTH PROC

Your Tama character c
depending on how yo

HOW TO MAKE YOU

When your Tama chara
you with a beep and t
Check the information
"Information" icon and

3

- **LONG JUMPER**

Keep going by jumping to the next box until you reach the goal. Press button (A) to keep jumping for a short distance, button (B) for a middle distance, and button (C) for a long distance.

<SHOP>

You can go to buy food for your Tama character or remodel its room. (Requires Gotchi Points.) Different items will be available from time to time.

<PARK>

You can go to the park and sometimes meet other Tama characters.

<PC>

You can get a password to login/logout to/from TamaTown.com.
How to login and logout:

1. Enter the amount of Gotchi points you want to bring in.
2. Use the login password to TamaTown.com.
3. Enter the logout password to logout from TamaTown.com

NOTE : When you cancel after obtaining a login password, you will lose points you were bringing to website.

<DATING PLACE>

When your Tama character becomes an adult and hasn't found a partner, you can go to the dating place to get married.

- Press button (A) to select "Date Place" command in "Doors" icon. Press button (B) to enter the dating place then a potential partner will appear. Press button (A) to select "Yes" or "No" and button (B) to make your decision.

- If you select "Yes", your Tama character gets married.
- Few days after marriage, a new egg representing the next generation will appear.
- After baby is born, the parents will return to Tama Planet. Continue to feed and care for new generation of your Tama character. Develop good relationships with other Tamagotchis to continue raising several generations of Tamagotchi.

GOTCHI FIGURE

Connect to your Tama-Go. Play games and shop. Included Gotchi character unlocks 1 game: Cradles.

- How to Play Cradles

Catch the thing by adjusting its position and timing. Press button (A) to move left, button (C) to move right, then button (B) to drop it.

CAUTION : Each different shape of Gotchi Figure included in Tama-Go contains a same game.
**** Additional Figures are sold separately.***

4

TRAINING

Sometimes your Tama character will call you when it wants to play. It's your chance to train it. Use button (A) to select the "Training" icon then button (B) to choose either "Time Out" or "Praise".

MEDICINE

When the Skull icon appears, your Tama character is sick. Use button (A) to select the "Medicine" icon and button (B) to nurse it back to health. Sometimes it may take more than one dose of medicine!

IR COMMUNICATION

Connect with another Tama-Go, Tamagotchi Music Star or V5 owner using the IR sensor. Connection is not possible with old (ex. V3, V4, V4.5) versions.

Press button (A) to select "IR Communication" icon then...

- To connect with another Tama-Go
  1 - Press button (B) to select "Tama-Go".
  2 - Choose "Game" or "Visit".
  3 - "Stand By" will appear on the screen.
  4 - Position both toys together with the IR sensors facing them each other (See illustration).
  5 - Press button (B) to begin IR communication.

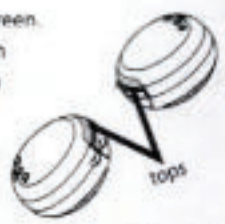

- To connect with a Tamagotchi Music Star or V5
  1 - Press button (B) to select "Others".

2 - The owner of Tam
button (B) to selec
3 - "Stand By" will app
4 - Position both toys
them each other.
5 - The owner of Tam
the connection b
communication.

Game - Play a game w
chosen randomly.
Visit - Spend time with

After several connecti
Tama character and y
in detail, see "Friends".

ALBUM

FRIENDS

Your Tamagotchi frie
connect through IR c
to select a "Friend" a
check your level of fr
improves with the m
Tamagotchis. When y
characters can get m
NOTE : Some characte
are unmarriageable (
"Chamametchi", "Goa
NOTE : Tama-Go and

MEMORY

View your Tamagotc
"Memory" to view yo
no longer under you
generations at the m

LIGHTS OUT

At night, your Tama
Press any button to

t mix old and new batteries, different types of batteries.
t use rechargeable batteries.
e respect the correct polarity, (+) and (-).
t recharge, decompose, heat, or dispose of batteries in fire.
ve batteries when not in use or discharged.
rough use such as knocking the product or swinging it around.
nts may vary from photos and illustrations shown on the package.
8 & up.
res 2 AAA batteries. Battery not included.

⚠ WARNING:

CHOKING HAZARD - Small parts.
Not for Children under 3 years.

Check us out at www.bandai-asia.com

Manufactured by
BANDAI
BANDAI ASIA CO., LTD.
23A Floor, Tower 1,
The Gateway, Harbour City,
Tsim Sha Tsui, Kowloon, Hong Kong.

e™ is an interactive virtual pet that will evolve differently depending on how f it. Play games with it, feed and cure it when it is sick and it will develop into

GOTCHI

screw
remove
teries
ver

batteries.
larity, (+)

ay from
mful if

s button
appear
d minute
and

e.
erate

ted by
d button

rthday
lounge

screen, you
time your
at 5 seconds

THE GROWTH PROCESS

Your Tama character can evolve in different stages depending on how you care for it

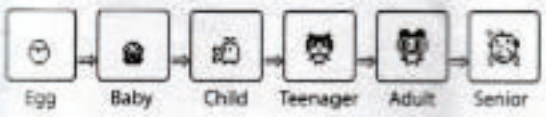

HOW TO MAKE YOUR TAMAGOTCHI GROW

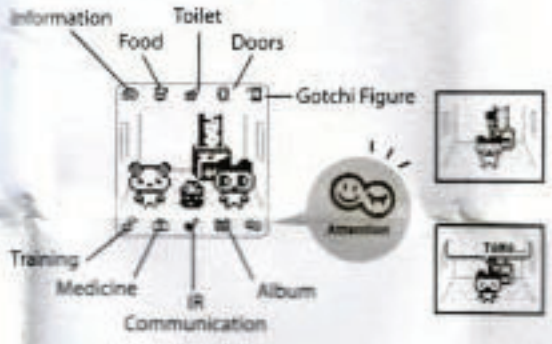

When your Tama character needs something, it calls you with a beep and the "Attention" icon is highlighted. Check the information to see what it needs with "Information" icon and play, feed or train it.

2

HOW TO TAKE CARE OF YOUR TAMAGOTCHI

INFORMATION

Press button (A) to select "Information" icon then press button (B). Use button (A) to scroll the following menu of your Tamagotchi Information.

- **GENDER / AGE / WEIGHT / GENERATION**
  Check the gender (boy or girl), age, weight and generation of your Tama character. Every day your Tamagotchi lives, it becomes 1 year older. Keep it healthy and don't allow its weight to get too high. If your Tamagotchi receives an egg on the screen, it will grow to become the next generation of your Tamagotchi.
- **LEVEL OF HUNGER / HAPPINESS**
  The number of hearts you have indicates your Tama character's Hunger and Happiness (the more the better).
- **LEVEL OF TRAIN / FRIENDSHIP**
  The number of dots indicates your Tama character's level of Training (the higher the better). The number of hearts you have indicates your Tama character's Friendship (the more the better).
- **NUMBER OF GOTCHI CHARACTER**
  The number shown inside of a large egg indicates how many kinds of Gotchi character have been connected to your Tama-Go. The counter of egg above displays 5 eggs at the maximum. Every time the number of connected Gotchi characters becomes over 5, it gets back to display 1 egg. (Ex. when you connect 7 Gotchi characters, the counter displays 2 eggs.)
- **CHARACTER TYPE / GOTCHI POINT**
  View the type of current Tama character. Check how many Gotchi points you've earned by playing games. Use Gotchi points to shop.
- **USER NAME**
  Check your user name.

FOOD

Press button (A) to select the "Food" icon, and use button (B) to choose from a variety of meals or snacks. Use Gotchi points to buy additional food items. But, be careful to feed your Tama character only when it's hungry. Overfeeding it might make it become sick or overweight.

NOTE : Additional food item can be stored until 3 pieces each.

TOILET/FLUSH

When your Tama character makes a mess, press button (A) to select the "Toilet" icon and use button (B) to clean up.

DOORS

Select the "Doors" icon with button (A) then press button (B) to choose the destination: Game, Shop, Park, PC.

<GAMES> Earn Gotchi Points!

- **SHOOT THE BUGS!**
  Shoot all the bugs. Press button (A) to change direction and button (B) to shoot.



er will call you
chance to train it.
aining" icon then
me Out" or "Praise".

our Tama character
the "Medicine" icon
to health.
han one dose of

Tamagotchi Music
ensor. Connection is
, V4.5] versions.

mmunication" icon

a-Go
Tama-Go".

he screen.
er with
each

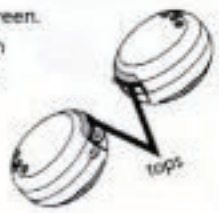

2 - The owner of Tamagotchi Music Star or V5 has to press button (B) to select "Others"
3 - "Stand By" will appear on both screens.
4 - Position both toys together with the IR sensors facing them each other.
5 - The owner of Tamagotchi Music Star or V5 has to start the connection by pressing button (B) to begin IR communication.

Game - Play a game with your friend. Each game will be chosen randomly.
Visit - Spend time with your friend.

After several connections with other Tamagotchis, your Tama character and your favorite partner may get married. In detail, see "Friends".

ALBUM

FRIENDS

Your Tamagotchi friends are registered when you connect through IR communication. Use button (B) to select a "Friend" and press button (B) again to check your level of friendship. Your friendship level improves with the more connections you make with other Tamagotchis. When your friendship level gets really high, characters can get married.

NOTE : Some character combination that is brother and sister are unmarriageable (for example, "Mametchi" and "Chamametchi", "Gozaruthi" and "Kunoitchi" and etc).
NOTE : Tama-Go and V5 characters are unmarriageable.

MEMORY

View your Tamagotchi heritage. Press button (B) to select "Memory" to view your previous Tama characters that are no longer under your care. You can see the latest 8 generations at the maximum.

LIGHTS OUT

At night, your Tama character will sleep. Press any button to turn off the light.

5

IF YOUR TAMAGOTCHI HAS GONE...

If you don't take care of your Tama character, sometimes it can get angry and return to its home on Tama Planet. To start over, press and hold button (A) and (C) together until a new egg appears. It will hatch after a few minutes.

NOTE : Once your Tama character has gone, the number of generation will not continue to count (back to 1st generation).

HOW TO SELECT SOUND ON/OFF

1. Press and hold button (A) & (C) together without selecting an icon.
2. Press button (A) to select sound ON or OFF then button (B) to set.

HOW TO SET THE CONTRAST

1. Press and hold button (B) then button (C) to view the contrast level.
2. Press button (A) to low and (B) to high.
3. Press button (C) then button (B) to be back to main screen.

HOW TO PAUSE YOUR TAMAGOTCHI

1. Press and hold button (A) then button (B) to pause.

NOTE : While in Pause mode, the clock continues to run, but Tama character's growth stops.

2. Press and hold button (A) and (B) together to move back to normal.

HOW TO REPLACE BATTERIES

See "How to wake your Tamagotchi" on page 1 to replace batteries.

CAUTION : Dispose of used batteries properly.

If you replace into new batteries, your data will be saved. You can download your data and resume from your last play.

HOW TO RESET/DOWNLOAD

1. Press RESET button on back.
2. Follow "How to wake your Tamagotchi" on page 1 to restart.
3. After pressing the RESET button, press button (B) to choose either "DOWNLOAD" or "RESET". If you select "DOWNLOAD", then you can resume from your last play.

CAUTION: If you select "RESET", Tamagotchi will start over and your memory will be erased (Gotchi points, items, friends, memory, user name and etc).

When to reset?

- The first time you activate Tamagotchi.
- When the image/screen freezes or does not move after several minutes.
- When you change the batteries.

HOW TO CHANGE THE TIME

1. To view current time, press button (B) without selecting an icon.
2. Press and hold button (A) & (C) together until month begins to flash. Use button (A) to select and button (B) to choose/set.

CAUTION : You can check your birthday while you're setting time but you cannot change your birthday.

3. Press button (C) to be back to main screen.

BANDAI®MD

Ages 8 and up.
Asst. #26650
Item #26651

Gotchi Figures QUICK START GUIDE

TAMATOWN™
by Tamagotchi®

Visit TamaTown.com for complete instructions.

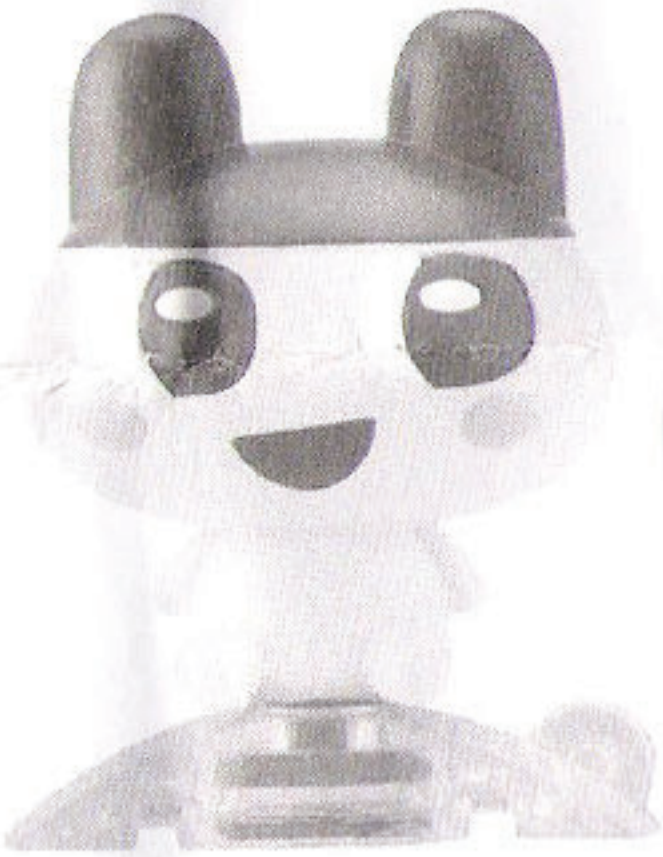

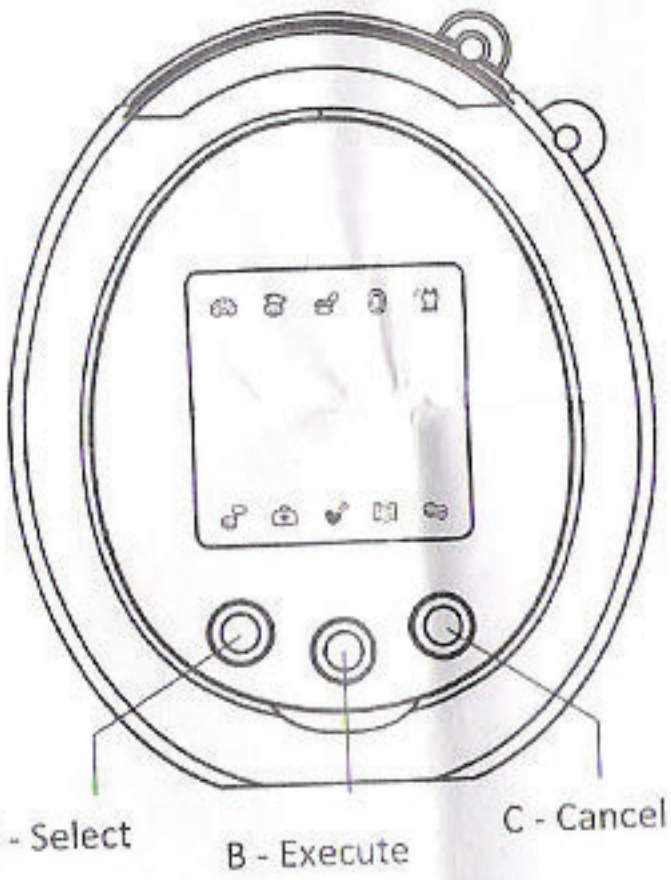

GOTCHI FIGURE

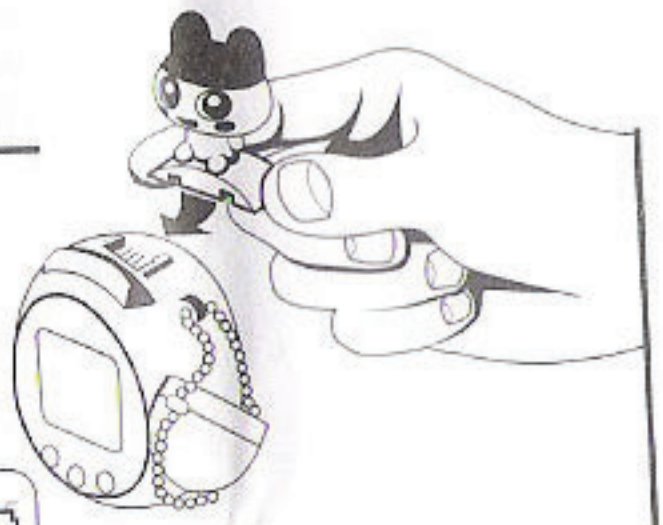

1. Slide Gotchi figure onto your Tama-Go

2. Go to "Gotchi Figure" icon

   If the character has a shop

   If the character has a restaurant

3. When you remove your Gotchi Figure, you will see

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella
TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive

⚠CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hinged parts of toy.

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.

Earn Gotchi Points!

Games

1. HIP HOP

Jump left/up/right to catch music notes. Do not fall or catch a skull.

A) Jump left
B) Jump up
C) Jump right

2. SPEED RUNNER

Dodge the obstacles to reach your goal.

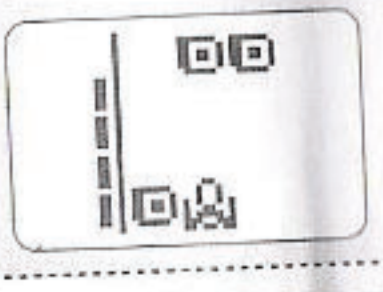

A) Right
C) Left

•• If you want to go left/right keep pressing the A or C button

•• If you release the button, car will stay in the middle

Shop

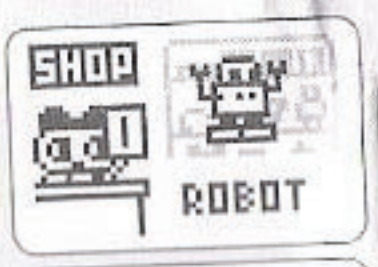

TOY SHOP

You can buy 9 items in this shop.
You will only see 4 items out of 9 items so please check back often for more items.

Item

You can use the items you bought.
Choose the item you want to use from the item box.

a Avenue, Cypress, California 90630. TM & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION,
property of Bandai. © Bandai, WiZ 2004-2010. All Rights Reserved.

BANDAI ®MD

Ages 6 and up.
Âge : 6 ans et plus.
Edad: 6 años y más
Asst./Surtido No. #26660
#26661

TAMATOWN™
by/de Tamagotchi

⚠ WA
CHOKING HA
parts. Not for childr

⚠CAUTION: PLEASE
- Do not: 1) aim toy at anyone, 2) hit
4) swing toy at anyone, 5) step on
- Be careful not to pinch fingers wit

Gotchi Figures/Figurines Gotchi/Figuras Gotchi
QUICK START GUIDE/GUIDE DE DÉMARRAGE
GUÍA DE INICIO RÁPIDO

Visit TamaTown.com for complete instructions.
Visite TamaTown.com pour voir les instructions complètes.
Visita TamaTown.com para obtener las instrucciones completas.

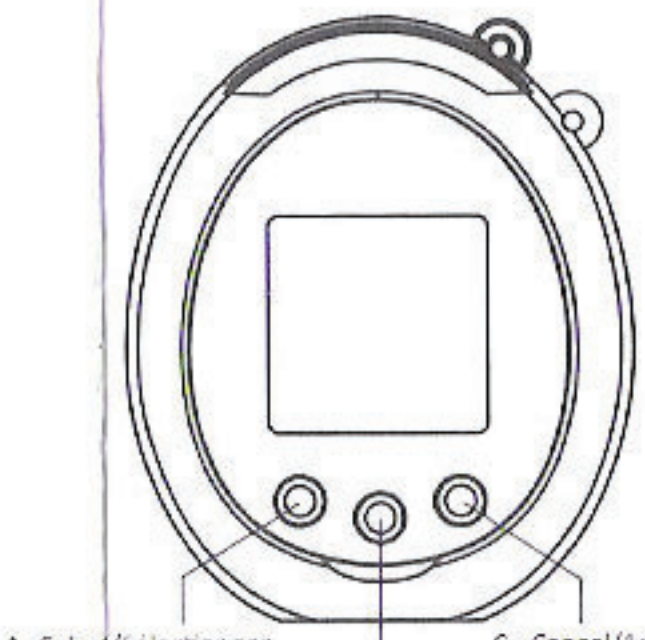

GOTCHI FIGURE/FIGURINE GOTCHI/FIGURA GOTCHI

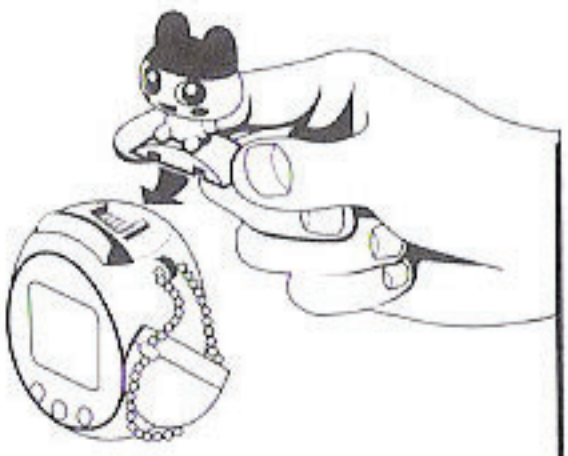

1. Slide Gotchi figure onto your Tama-Go.
   Glisse la figurine Gotchi sur ton Tama-Go.
   Desliza la figura Gotchi en tu Tama-Go.

2. Go to "Gotchi Figure" icon
   Va à l'icône de la « figurine Gotchi »
   Ve al icono de la "Figura Gotchi"

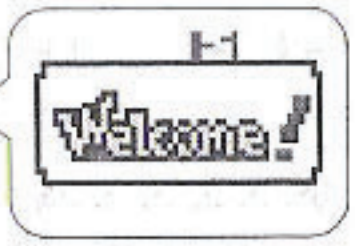

If the character has a shop
Si le personnage a une boutique
Si el personaje tiene una tienda

If the character has a restaurant
Si le personnage a un restaurant
Si el personaje tiene un restaurante

3. When you remove your Gotchi Figure, you will see
   Quand tu enlèveras ta figurine Gotchi, tu verras
   Cuando retires tu Figura Gotchi, verás

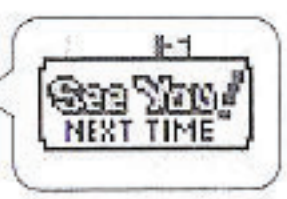

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. Bandai logo ® & © 2010 Bandai. TAMAG
BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. All Rights Reserved./ Couleur, style et décoration pouvant varier. Distribué par Bandai America Incorporated, 5551 Kat
connexes appartiennent exclusivement à Bandai. © 2004-2010 Bandai, WiZ. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Tous droits réservés./ Los colores, estil
CONNECTION, TAMATOWN, Tama-Go y todos los logotipos y nombres asociados, así como las similitudes distintivas, son de propiedad exclusiva de Bandai. © Bandai, WiZ 2

RNING:
AZARD-Small
en under 3 years.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-Petites pièces.
Ne convient pas aux enfants de moins de 3 ans.

⚠ ADVERTENCIA:
PELIGRO DE ATRAGANTARSE-Piezas pequeñas.
No se recomienda para niños menores de 3 años.

READ BEFORE PLAYING WITH TOY

anyone with toy, 3) poke anyone with toy,
toy.
h hinged parts of toy.

⚠ AVERTISSEMENT: LIRE AVANT DE JOUER AVEC LE JOUET

- **Ne pas:** 1) Pointer le jouet sur quelqu'un, 2) Frapper quelqu'un avec le jouet, 3) Piquer quelqu'un avec le jouet, 4) Lancer le jouet sur quelqu'un, 5) Marcher sur le jouet.
- **Faire attention** de ne pas se pincer les doigts avec les parties articulées du jouet.

⚠ PRECAUCIÓN: LEER ANTES DE JUGAR CON EL JUGUETE

- **No:** 1) Apuntar a nadie con el juguete, 2) Golpear a nadie con el juguete, 3) Pinchar a nadie con el juguete, 4) Intentar pegarle a nadie con el juguete, 5) Pisar el juguete.
- **Tener cuidado** de no apretarse los dedos con las piezas a bisagra del juguete.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.
L'article exclusif au Web est disponible lorsque tu te connectes avec ta figurine Gotchi.
El artículo exclusivo de Internet se encuentra disponible cuando abres una sesión con tu Figura Gotchi.

GAMES/JEUX/JUEGOS

Earn Gotchi Points!
Gagne des points Gotchi !
¡Gana puntos Gotchi!

1. GAP AND GAP/DE VIDE EN VIDE/POR LOS ESPACIOS

Go Gap and Gap to get to the goal.
Traverse les vides pour atteindre le but.
Pasa por los espacios para llegar a la meta.

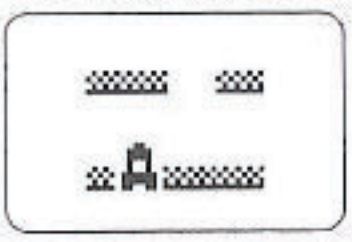

A) Left/Gauche/Hacia la izquierda
B) Press and hold to speed up/Aller plus vite (en appuyant)/Apurarse (mientras se oprime)
C) Right/Droite/Hacia la derecha

2. HIP HOP/HIP HOP/HIP HOP

Jump left/up/right to catch the balls. Do not catch a skull.
Saute vers la gauche/le haut/la droite pour attraper les ballons. N'attrape pas un crâne.
Salta hacia la izquierda/arriba/derecha para agarrar las pelotas. No agarres una calavera.

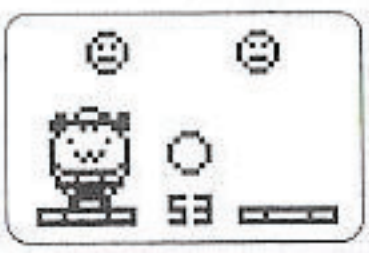

A) Jump left/Sauter vers la gauche/Saltar hacia la izquierda
B) Jump up/Sauter vers le haut/Saltar hacia arriba
C) Jump right/Sauter vers la droite/Saltar hacia la derecha

SHOP/BOUTIQUE/TIENDA

ELECTRONICS SHOP/MAGASIN DE PRODUITS ÉLECTRONIQUES/TIENDA DE ELECTRÓNICA

You can buy 9 items in this shop.
Tu peux acheter 9 articles dans cette boutique.
Puedes comprar 9 artículos en esta tienda.

You will only see 4 items out of 9 items, so please check back often for more items.
Tu ne verras que 4 articles sur 9 alors, reviens souvent pour voir plus d'articles.
Sólo verás 4 artículos de los 9 artículos, así que por favor vuelve a chequear a menudo para ver más artículos.

ITEM/ARTICLE/ARTÍCULO

You can use the items you bought/Tu peux utiliser les articles que tu as achetés./Puedes usar los artículos que compraste.
Choose the item you want to use from the item box/Choisis l'article que tu veux utiliser à partir de la boîte d'articles/Escoge el artículo que desees utilizar de la caja de artículos. If you have bought items from your attached Tama Character Figure, you will be able to wear or play with the items you have bought by going to the Item Box. To access your Item Box, select the "Gotchi Figure" icon with Button (A) then press Button (B) to choose "Item". Scroll through your purchased items with Button (A) then press Button (B) to select it./Si tu as acheté des articles à ta figurine Tama, tu pourras les porter ou jouer avec les articles achetés en allant à la boîte d'articles. Pour accéder à ta boîte d'articles, sélectionne l'icône de "figurine Gotchi" avec le bouton (A), puis appuie sur le bouton (B) pour choisir "Item". Défile pour voir tes achats en te servant du bouton (A), puis appuie sur le bouton (B) pour sélectionner l'article./Si has comprado artículos de tu Figura del Personaje Tama adjunta, podrás usar o jugar con los artículos que hayas comprado yendo a la Caja de Artículos. Para entrar a tu Caja de Artículos, selecciona el icono de la Figura Gotchi "Gotchi Figure" con el Botón (A) y luego oprime el Botón (B) para escoger el artículo "Item". Pasa por los artículos comprados utilizando el Botón (A) y luego oprime el Botón (B) para seleccionarlo.

OTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © 2004-2010 Bandai, WiZ. © ella Avenue, Cypress, California 90630. MC & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go et les logos, noms et ressemblances distinctives los y decoraciones pueden variar. Distribuido por Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. MR y © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI 004-2010. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Todos los derechos reservados.

BANDAI®MD

Ages 6 and up.
Âge : 6 ans et plus.
Edad: 6 años y más
Asst./Surtido No. #26650
#26658

TAMATOWN™MC
by/de Tamagotchi[s]

Gotchi Figures/Figurines Gotchi/Figuras Gotchi
QUICK START GUIDE/GUIDE DE DÉMARRAGE
GUÍA DE INICIO RÁPIDO

Visit TamaTown.com for complete instructions.
Visite TamaTown.com pour voir les instructions complètes.
Visita TamaTown.com para obtener las instrucciones completas.

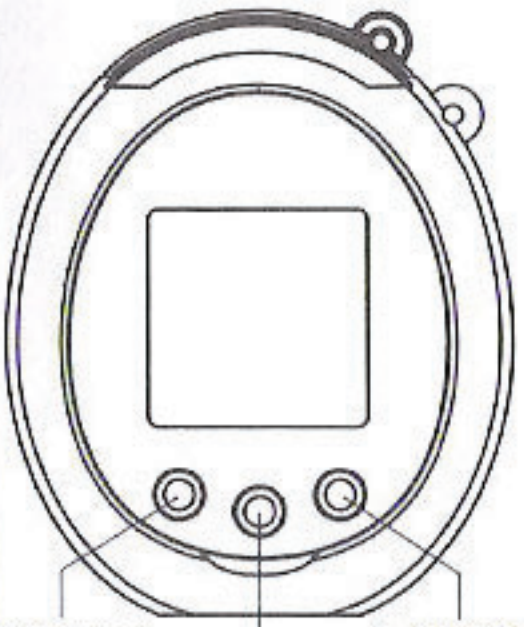

GOTCHI FIGURE/FIGURINE GOTCHI/FIGURA GOTCHI

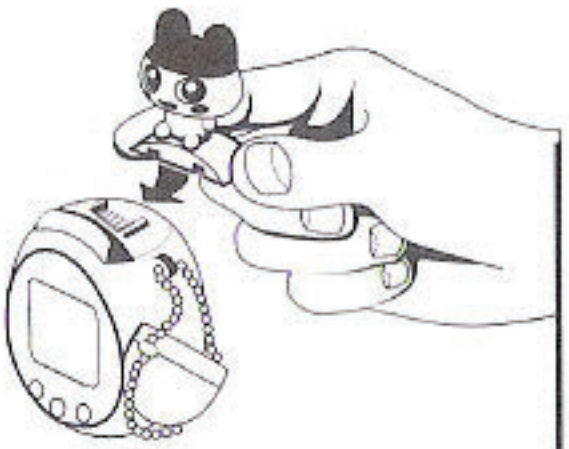

1. Slide Gotchi figure onto your Tama-Go.
   Glisse la figurine Gotchi sur ton Tama-Go.
   Desliza la figura Gotchi en tu Tama-Go.

2. Go to "Gotchi Figure" icon
   Va à l'icône de la « figurine Gotchi »
   Ve al icono de la "Figura Gotchi"

If the character has a shop
Si le personnage a une boutique
Si el personaje tiene una tienda

If the character has a restaurant
Si le personnage a un restaurant
Si el personaje tiene un restaurante

3. When you remove your Gotchi Figure, you will see
   Quand tu enlèveras ta figurine Gotchi, tu verras
   Cuando retires tu Figura Gotchi, verás

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. Bandai logo ® & © 2010 Bandai. TAMAGOT
BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. All Rights Reserved./ Couleur, style et décoration pouvant varier. Distribué par Bandai America Incorporated, 5551 Katell
connexes appartiennent exclusivement à Bandai. © 2004-2010 Bandai, WiZ. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Tous droits réservés./ Los colores, estilos
CONNECTION, TAMATOWN, Tama-Go y todos los logotipos y nombres asociados, así como las similitudes distintivas, son de propiedad exclusiva de Bandai. © Bandai, WiZ 200

⚠ WAR
CHOKING HA
parts. Not for childre

⚠CAUTION: PLEASE RE
- **Do not:** 1) aim toy at anyone, 2) hit an
  4) swing toy at anyone, 5) step on toy
- **Be careful** not to pinch fingers with h

RNING:
ZARD-Small
n under 3 years.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-Petites pièces.
Ne convient pas aux enfants de moins de 3 ans.

⚠ ADVERTENCIA:
PELIGRO DE ATRAGANTARSE-Piezas pequeñas.
No se recomienda para niños menores de 3 años.

AD BEFORE PLAYING WITH TOY

yone with toy, 3) poke anyone with toy.
inged parts of toy.

⚠ AVERTISSEMENT: LIRE AVANT DE JOUER AVEC LE JOUET

- **Ne pas:** 1) Pointer le jouet sur quelqu'un, 2) Frapper quelqu'un avec le jouet, 3) Piquer quelqu'un avec le jouet, 4) Lancer le jouet sur quelqu'un, 5) Marcher sur le jouet.
- **Faire attention** de ne pas se pincer les doigts avec les parties articulées du jouet.

⚠ PRECAUCIÓN: LEER ANTES DE JUGAR CON EL JUGUETE

- **No:** 1) Apuntar a nadie con el juguete, 2) Golpear a nadie con el juguete, 3) Pinchar a nadie con el juguete, 4) Intentar pegarle a nadie con el juguete, 5) Pisar el juguete.
- **Tener cuidado** de no apretarse los dedos con las piezas a bisagra del juguete.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.
L'article exclusif au Web est disponible lorsque tu te connectes avec ta figurine Gotchi.
El artículo exclusivo de Internet se encuentra disponible cuando abres una sesión con tu Figura Gotchi.

GAMES/JEUX/JUEGOS

Earn Gotchi Points!
Gagne des points Gotchi !
¡Gana puntos Gotchi!

1. DRIVING/EN ROUTE/CONDUCIENDO

Drive the car to reach your goal.
Conduis la voiture pour atteindre ton but.
Conduce tu automóvil para llegar a tu meta.

A) Press and hold to turn left/Tourner à gauche (en appuyant)/Girar hacia la izquierda (mientras se oprime)
C) Press and hold to turn right/Tourner à droite (en appuyant)/Girar hacia la derecha (mientras se oprime)

2. BALL MATCH/JEU DE BALLONS/JUEGO DE PELOTA

Select and shoot the falling balls.
Sélectionne les ballons qui tombent et tire dessus.
Selecciona y dispara a las pelotas que caen.

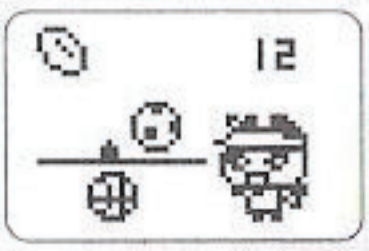

A) Shoot left/Tirer vers la gauche/Disparar hacia la izquierda
B) Select/Sélectionner/Seleccionar
C) Shoot right/Tirer vers la droite/Disparar hacia la derecha

SHOP/BOUTIQUE/TIENDA

SPORTS SHOP/MAGASIN D'ÉQUIPEMENT SPORTIF/TIENDA DEPORTIVA

You can buy 9 items in this shop.
Tu peux acheter 9 articles dans cette boutique.
Puedes comprar 9 artículos en esta tienda.

You will only see 4 items out of 9 items, so please check back often for more items.
Tu ne verras que 4 articles sur 9 alors, reviens souvent pour voir plus d'articles.
Sólo verás 4 artículos de los 9 artículos, así que por favor vuelve a chequear a menudo para ver más artículos.

ITEM/ARTICLE/ARTÍCULO

You can use the items you bought/Tu peux utiliser les articles que tu as achetés/Puedes usar los artículos que compraste.
Choose the item you want to use from the item box/Choisis l'article que tu veux utiliser à partir de la boîte d'articles/Escoge el artículo que desees utilizar de la caja de artículos. If you have bought items from your attached Tama Character Figure, you will be able to wear or play with the items you have bought by going to the Item Box. To access your Item Box, select the "Gotchi Figure" icon with Button (A) then press Button (B) to choose "Item". Scroll through your purchased items with Button (A) then press Button (B) to select it./Si tu as acheté des articles à ta figurine Tama, tu pourras les porter ou jouer avec les articles achetés en allant à la boîte d'articles. Pour accéder à ta boîte d'articles, sélectionne l'icône de "figurine Gotchi" avec le bouton (A), puis appuie sur le bouton (B) pour choisir "Item". Défile pour voir tes achats en te servant du bouton (A), puis appuie sur le bouton (B) pour sélectionner l'article./Si has comprado artículos de tu Figura del Personaje Tama adjunta, podrás usar o jugar con los artículos que hayas comprado yendo a la Caja de Artículos. Para entrar a tu Caja de Artículos, selecciona el icono de la Figura Gotchi "Gotchi Figure" con el Botón (A) y luego oprime el Botón (B) para escoger el artículo "Item". Pasa por los artículos comprados utilizando el Botón (A) y luego oprime el Botón (B) para seleccionarlo.

CHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © 2004-2010 Bandai, WiZ. © a Avenue, Cypress, California 90630. MC & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go et les logos, noms et ressemblances distinctives y decoraciones pueden variar. Distribuido por Bandai America Incorporated, 5551 Katella /venue, Cypress, California 90630. MR y © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI 4-2010. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Todos los derechos reservados.

Ages 8 and up.
Asst. #26650
Item #26654

Gotchi Figures QUICK START GUIDE

TAMATOWN™ by Tamagotchi®

Visit TamaTown.com for complete instructions.

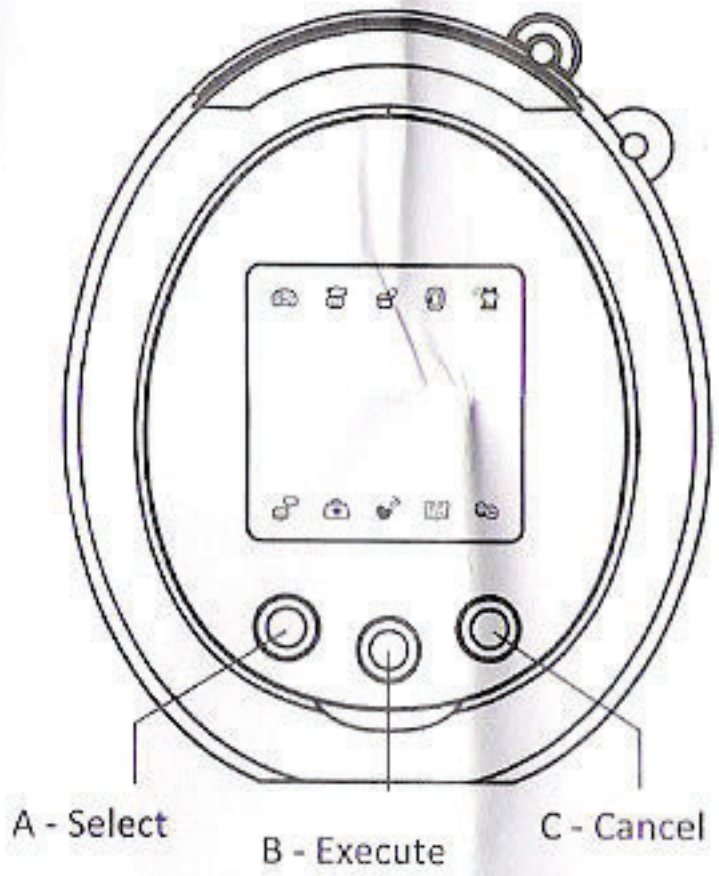

GOTCHI FIGURE

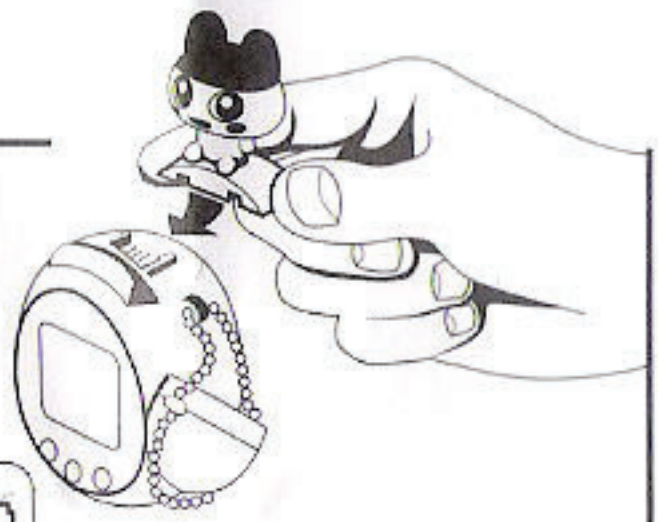

1. Slide Gotchi figure onto your Tama-Go

2. Go to "Gotchi Figure" icon

If the character has a shop

If the character has a restaurant

3. When you remove your Gotchi Figure, you will see

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Av
TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive pro

⚠CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hinged parts of toy.

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.

Games

Earn Gotchi Points!

1. PANEL CONSTRUCTION

Drop the claw and collect a piece of a panel to complete.

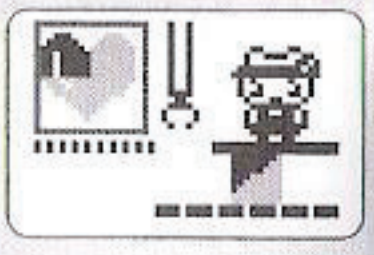

B) Drop a claw

2. SHUFFLE SHUFFLE

Find the hidden item by selecting one of the boxes.

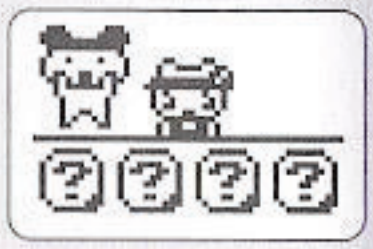

A) Select
B) Decide
C) Give up!

Shop

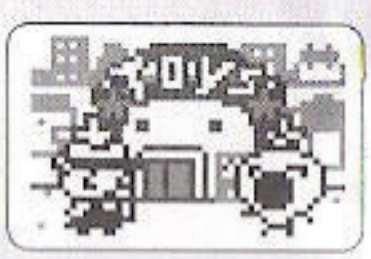

TOY SHOP

You can buy 9 items in this shop.
You will only see 4 items out of 9 items so please check back often for more items.

Item

You can use the items you bought.
Choose the item you want to use from the item box.

venue, Cypress, California 90630. TM & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, operty of Bandai. © Bandai, WiZ 2004-2010. All Rights Reserved.

BANDAI®MD

Ages 8 and up.
Asst. #26650
Item #26652

Gotchi Figures QUICK START GUIDE

TAMATOWN™ by Tamagotchi®

Visit TamaTown.com for complete instructions.

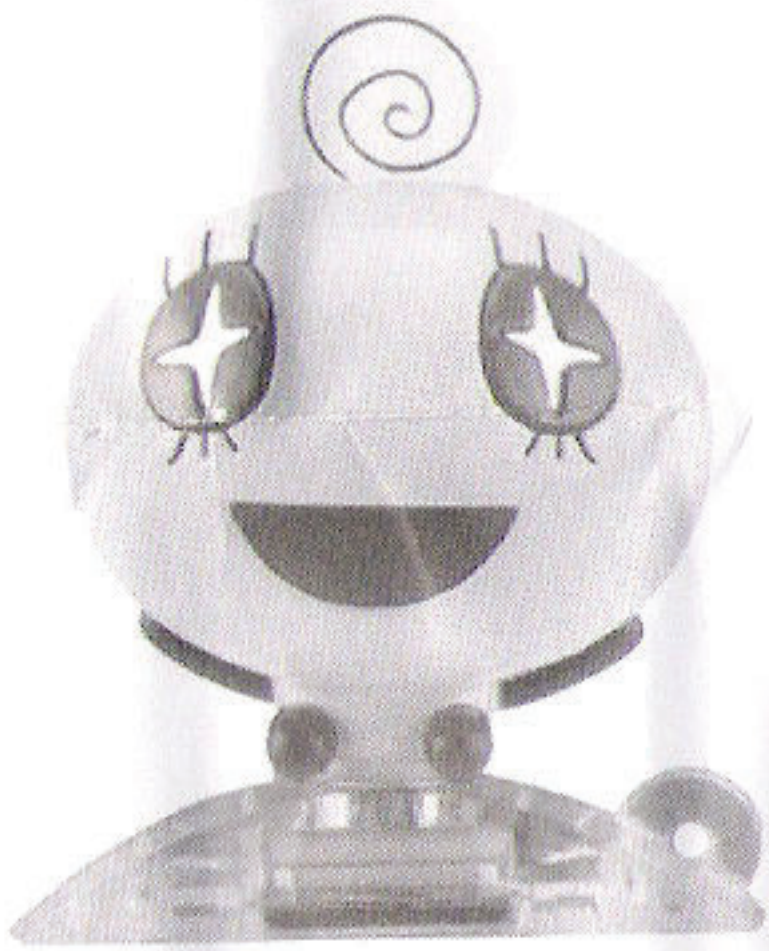

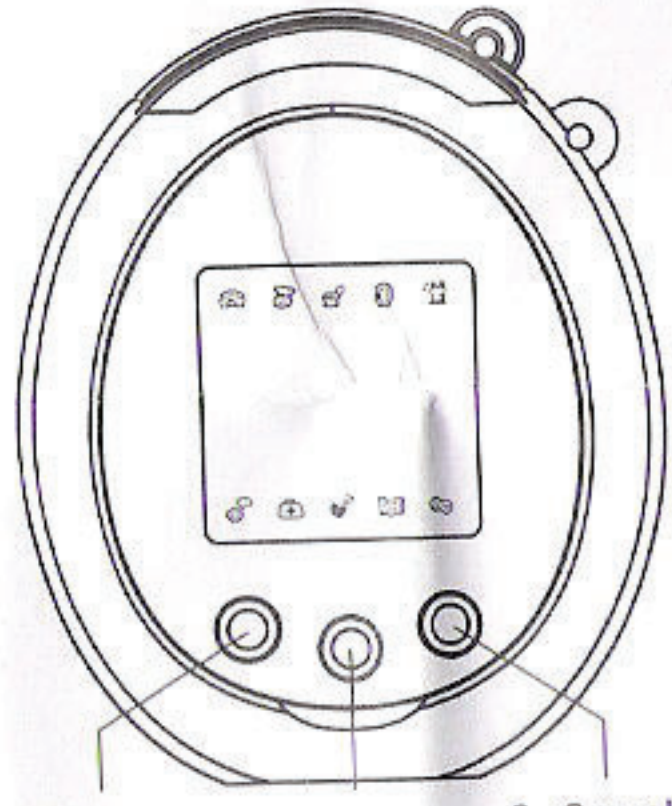

GOTCHI FIGURE

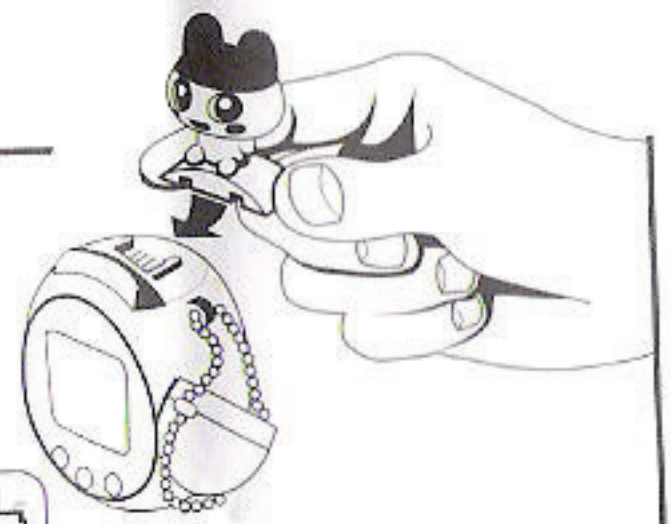

1. Slide Gotchi figure onto your Tama-Go

2. Go to "Gotchi Figure" icon

   If the character has a shop

   If the character has a restaurant

3. When you remove your Gotchi Figure, you will see

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella
TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive

⚠CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hinged parts of toy.

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.

Games

Earn Gotchi Points!

1. HIT A NOTE

Shoot the music notes!

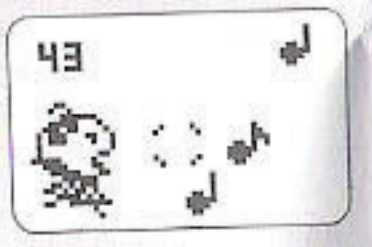

A) Shoot
B) Aim down
C) Aim up

2. PANEL MATCH

Match the object falling down.

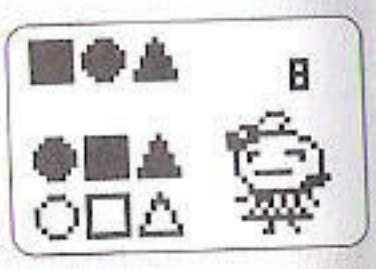

A) + B) together: Exchange left and center
B) + C) together: Exchange right and center
C) + A) together: Exchange right and left

Shop

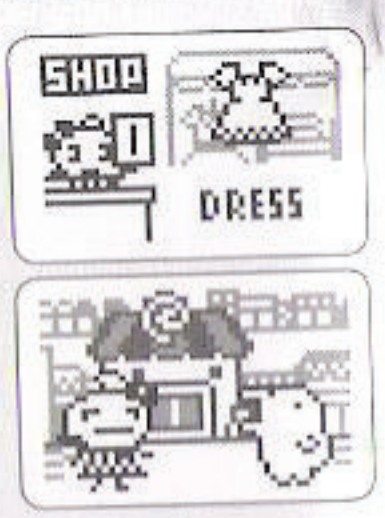

CLOTHES SHOP

You can buy 9 items in this shop.
You will only see 4 items out of 9 items so please check back often for more items.

Item

You can use the items you bought.
Choose the item you want to use from the item box.

a Avenue, Cypress, California 90630. TM & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION,
property of Bandai. © Bandai, WiZ 2004-2010. All Rights Reserved.

BANDAI ®MD

Ages 6 and up.
Âge : 6 ans et plus.
Edad: 6 años y más
Asst./Surtido No. #26650
#26657

TAMATOWN™
by/de Tamagotchi

⚠ WARN
CHOKING HAZ
parts. Not for children

⚠CAUTION: PLEASE READ
- **Do not:** 1) aim toy at anyone, 2) hit anyo
  4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hin

Gotchi Figures/Figurines Gotchi/Figuras Gotchi
QUICK START GUIDE/GUIDE DE DÉMARRAGE
GUÍA DE INICIO RÁPIDO

Visit TamaTown.com for complete instructions.
Visite TamaTown.com pour voir les instructions complètes.
Visita TamaTown.com para obtener las instrucciones completas

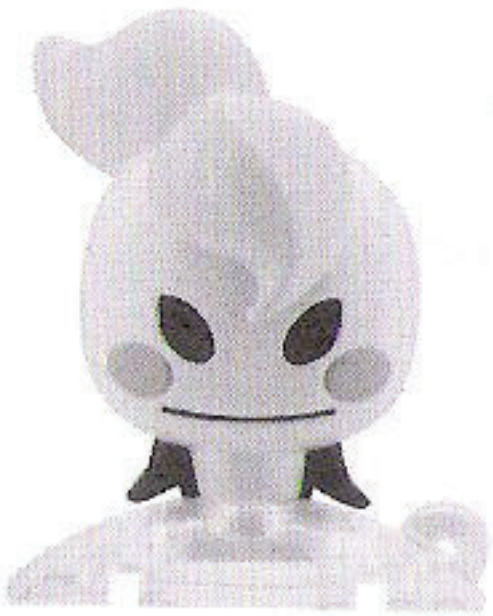

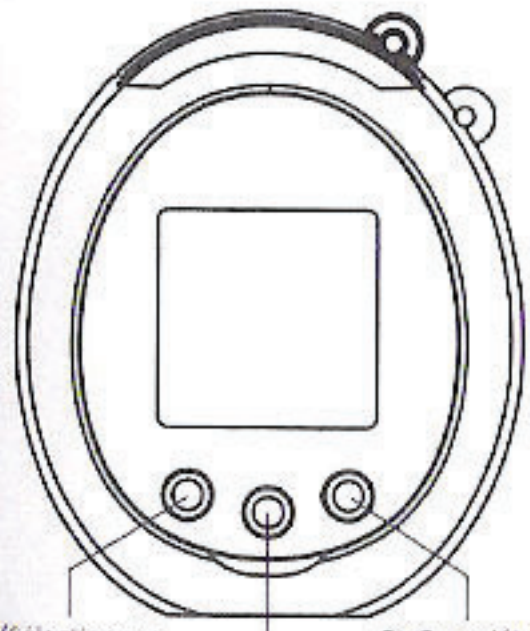

GOTCHI FIGURE/FIGURINE GOTCHI/FIGURA GOTCHI

1. Slide Gotchi figure onto your Tama-Go.
   Glisse la figurine Gotchi sur ton Tama-Go.
   Desliza la figura Gotchi en tu Tama-Go.

2. Go to "Gotchi Figure" icon
   Va à l'icône de la « figurine Gotchi »
   Ve al icono de la "Figura Gotchi"

If the character has a shop
Si le personnage a une boutique
Si el personaje tiene una tienda

If the character has a restaurant
Si le personnage a un restaurant
Si el personaje tiene un restaurante

3. When you remove your Gotchi Figure, you will see
   Quand tu enlèveras ta figurine Gotchi, tu verras
   Cuando retires tu Figura Gotchi, verás

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. Bandai logo ® & © 2010 Bandai. TAMAGOTCHI
BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. All Rights Reserved./ Couleur, style et décoration pouvant varier. Distribué par Bandai America Incorporated, 5551 Katella Av
connexes appartiennent exclusivement à Bandai. © 2004-2010 Bandai, WiZ. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Tous droits réservés./ Los colores, estilos y d
CONNECTION, TAMATOWN, Tama-Go y todos los logotipos y nombres asociados, así como las similitudes distintivas, son de propiedad exclusiva de Bandai. © Bandai, WiZ 2004-20

NING:
ARD-Small under 3 years.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-Petites pièces.
Ne convient pas aux enfants de moins de 3 ans.

⚠ ADVERTENCIA:
PELIGRO DE ATRAGANTARSE-Piezas pequeñas.
No se recomienda para niños menores de 3 años.

BEFORE PLAYING WITH TOY

...e with toy, 3) poke anyone with toy.

...ged parts of toy.

⚠AVERTISSEMENT: LIRE AVANT DE JOUER AVEC LE JOUET

- **Ne pas:** 1) Pointer le jouet sur quelqu'un, 2) Frapper quelqu'un avec le jouet, 3) Piquer quelqu'un avec le jouet, 4) Lancer le jouet sur quelqu'un, 5) Marcher sur le jouet.
- **Faire attention** de ne pas se pincer les doigts avec les parties articulées du jouet.

⚠PRECAUCIÓN: LEER ANTES DE JUGAR CON EL JUGUETE

- **No:** 1) Apuntar a nadie con el juguete, 2) Golpear a nadie con el juguete, 3) Pinchar a nadie con el juguete, 4) Intentar pegarle a nadie con el juguete, 5) Pisar el juguete.
- **Tener cuidado** de no apretarse los dedos con las piezas a bisagra del juguete.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.
L'article exclusif au Web est disponible lorsque tu te connectes avec ta figurine Gotchi.
El artículo exclusivo de Internet se encuentra disponible cuando abres una sesión con tu Figura Gotchi.

GAMES/JEUX/JUEGOS

Earn Gotchi Points!
Gagne des points Gotchi !
¡Gana puntos Gotchi!

1. HUNTING/CHASSE/CAZA

Shoot the target!
Tire sur la cible !
¡Dispárale al objetivo!

A) Left/Gauche/Hacia la izquierda
B) Shoot/Tirer/Disparar
C) Right/Droite/Hacia la derecha

2. MANHOLE/BOUCHE D'ÉGOUT/POZO DE INSPECCIÓN

Open the hole to receive the items. You do not want to get a skull.
Ouvre la bouche d'égout pour obtenir les articles. Tu ne veux pas avoir un crâne.
Abre el orificio para obtener los artículos. No deseas obtener una calavera.

A) Open the left hole/Ouvre la bouche d'égout gauche/Abrir el orificio de la izquierda.
B) Open the middle hole/Ouvre la bouche d'égout centrale/Abrir el orificio del centro
C) Open the right hole/Ouvre la bouche d'égout droite/Abrir el orificio de la derecha

SHOP/BOUTIQUE/TIENDA

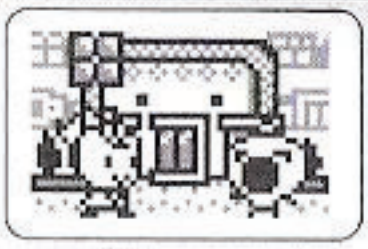

FASHION SHOP/BOUTIQUE DE MODE/TIENDA DE MODAS

You can buy 9 items in this shop.
Tu peux acheter 9 articles dans cette boutique.
Puedes comprar 9 artículos en esta tienda.

You will only see 4 items out of 9 items, so please check back often for more items.
Tu ne verras que 4 articles sur 9 alors, reviens souvent pour voir plus d'articles.
Sólo verás 4 artículos de los 9 artículos, así que por favor vuelve a chequear a menudo para ver más artículos.

ITEM/ARTICLE/ARTÍCULO

You can use the items you bought/Tu peux utiliser les articles que tu as achetés./Puedes usar los artículos que compraste.
Choose the item you want to use from the item box/Choisis l'article que tu veux utiliser à partir de la boite d'articles/Escoge el artículo que desees utilizar de la caja de artículos. If you have bought items from your attached Tama Character Figure, you will be able to wear or play with the items you have bought by going to the Item Box. To access your Item Box, select the "Gotchi Figure" icon with Button (A) then press Button (B) to choose "Item". Scroll through your purchased items with Button (A) then press Button (B) to select it./Si tu as acheté des articles à ta figurine Tama, tu pourras les porter ou jouer avec les articles achetés en allant à la boîte d'articles. Pour accéder à ta boîte d'articles, sélectionne l'icône de "figurine Gotchi" avec le bouton (A), puis appuie sur le bouton (B) pour choisir "Item". Défile pour voir tes achats en te servant du bouton (A), puis appuie sur le bouton (B) pour sélectionner l'article./Si has comprado artículos de tu Figura del Personaje Tama adjunta, podrás usar o jugar con los artículos que hayas comprado yendo a la Caja de Artículos. Para entrar a tu Caja de Artículos, selecciona el icono de la Figura Gotchi "Gotchi Figure" con el Botón (A) y luego oprime el Botón (B) para escoger el artículo "Item". Pasa por los artículos comprados utilizando el Botón (A) y luego oprime el Botón (B) para seleccionarlo.

..., TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © 2004-2010 Bandai, WiZ. © ...venue, Cypress, California 90630. MC & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go et les logos, noms et ressemblances distinctives ...ecoraciones pueden variar. Distribuido por Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. MR y © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI ...010. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Todos los derechos reservados.

BANDAI®MD

Ages 8 and up.
Asst. #26650
Item #26653

TAMATOWN™
by Tamagotchi®

Gotchi Figures QUICK START GUIDE

Visit TamaTown.com for complete instructions.

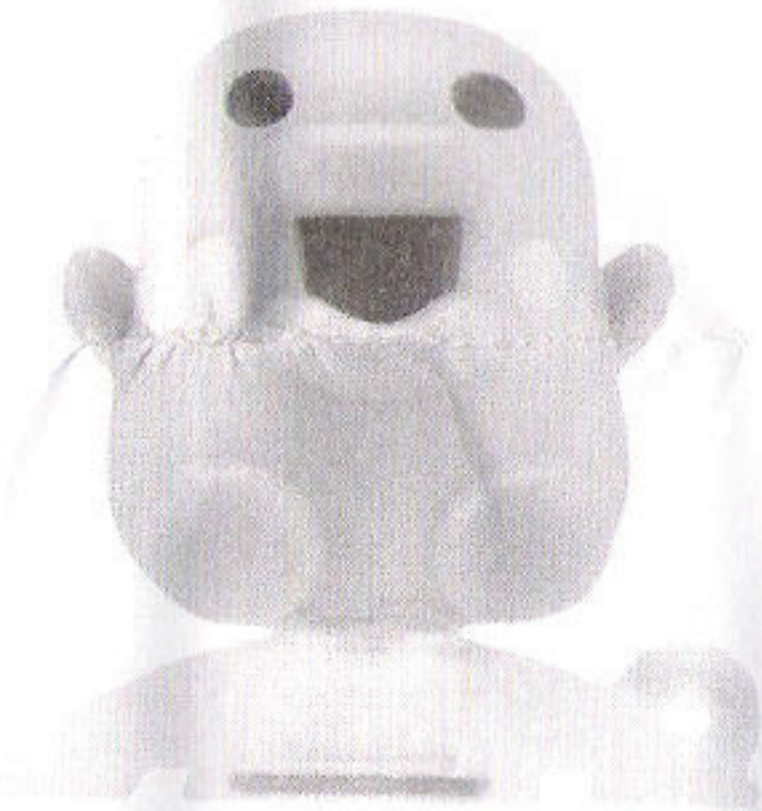

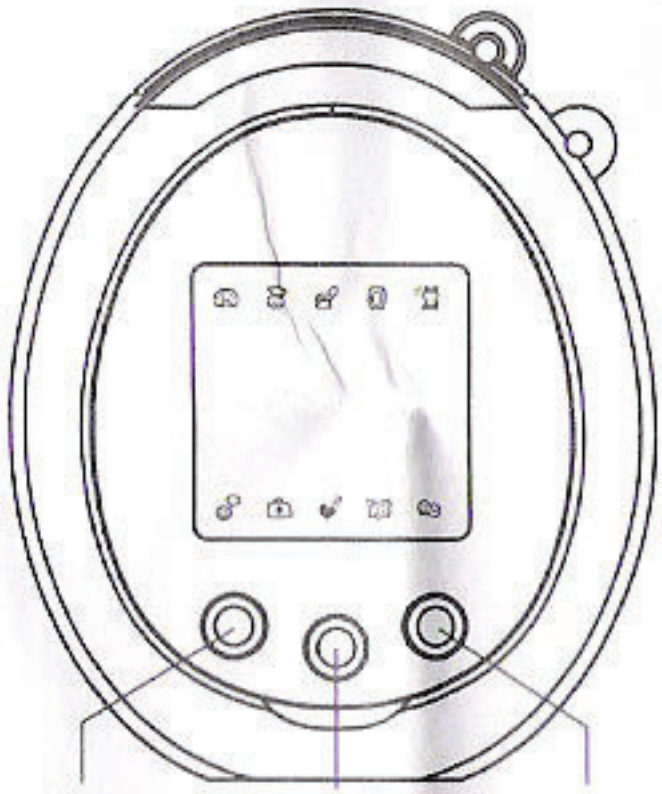

GOTCHI FIGURE

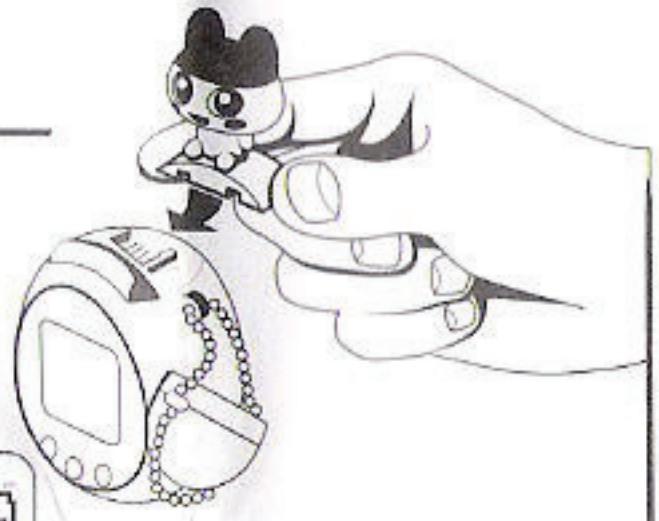

1. Slide Gotchi figure onto your Tama-Go

2. Go to "Gotchi Figure" icon 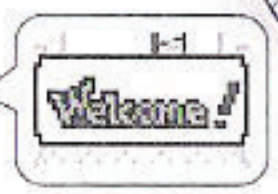

   If the character has a shop

   If the character has a restaurant

3. When you remove your Gotchi Figure, you will see 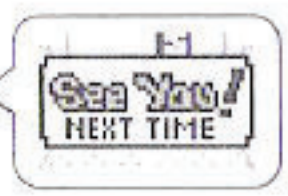

Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. TM &
related logos, names and distinctive likenesses are the exclusive property of Bandai. © Bandai, Wi

⚠CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hinged parts of toy.

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.

Games

Earn Gotchi Points!

1. FLAG GAME

Follow the flag by going up and down.

A) Right flag up/down
C) Left flag up/down

2. VEGETABLES

Match the falling vegetables by scrolling the panel.

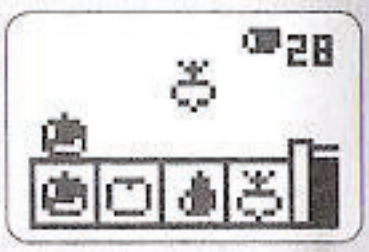

A) Scroll left
C) Scroll right

Shop

CHINESE RESTAURANT

You can buy 9 items in this restaurant.
You will only see 4 items out of 9 items so please check back often for more items.

& © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all
Z 2004-2010. All Rights Reserved.

Ages 6 and up.
Âge : 6 ans et plus.
Edad: 6 años y más
Asst./Surtido No. #26650
#26659

TAMATOWN by/de Tamagotchi

⚠ WAR
CHOKING HA
parts. Not for childre

⚠CAUTION: PLEASE RE
- **Do not:** 1) aim toy at anyone, 2) hit a
4) swing toy at anyone, 5) step on to
- **Be careful** not to pinch fingers with

Gotchi Figures/Figurines Gotchi/Figuras Gotchi
QUICK START GUIDE/GUIDE DE DÉMARRAGE
GUÍA DE INICIO RÁPIDO

Visit TamaTown.com for complete instructions.
Visite TamaTown.com pour voir les instructions complètes.
Visita TamaTown.com para obtener las instrucciones completas.

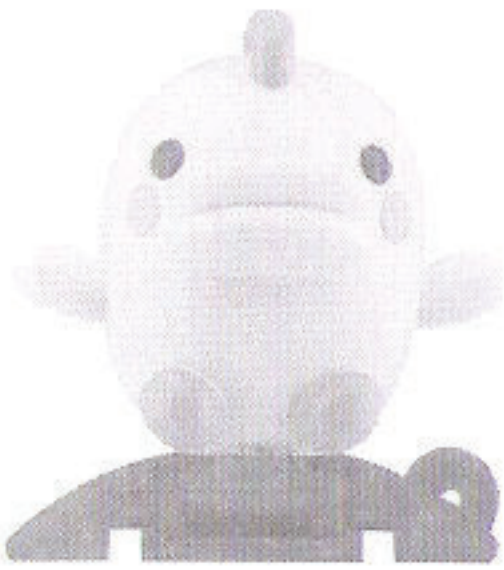

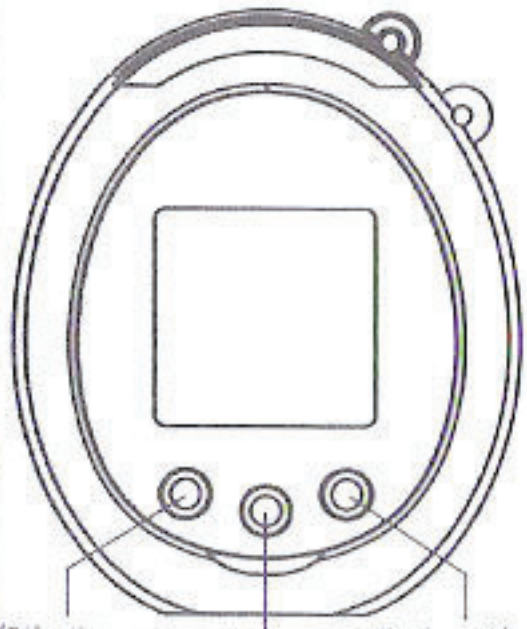

GOTCHI FIGURE/FIGURINE GOTCHI/FIGURA GOTCHI

1. Slide Gotchi figure onto your Tama-Go.
Glisse la figurine Gotchi sur ton Tama-Go.
Desliza la figura Gotchi en tu Tama-Go.

2. Go to "Gotchi Figure" icon
Va à l'icône de la « figurine Gotchi »
Ve al icono de la "Figura Gotchi"

If the character has a shop
Si le personnage a une boutique
Si el personaje tiene una tienda

If the character has a restaurant
Si le personnage a un restaurant
Si el personaje tiene un restaurante

3. When you remove your Gotchi Figure, you will see
Quand tu enlèveras ta figurine Gotchi, tu verras
Cuando retires tu Figura Gotchi, verás

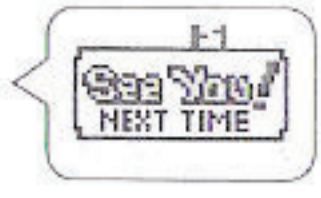

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. Bandai logo ® & © 2010 Bandai. TAMAGOT
BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. All Rights Reserved./ Couleur, style et décoration pouvant varier. Distribué par Bandai America Incorporated, 5551 Katell
connexes appartiennent exclusivement à Bandai. © 2004-2010 Bandai, WiZ. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Tous droits réservés./ Los colores, estilos
CONNECTION, TAMATOWN, Tama-Go y todos los logotipos y nombres asociados, así como las similitudes distintivas, son de propiedad exclusiva de Bandai. © Bandai, WiZ 200

RNING:
ZARD-Small
n under 3 years.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-Petites pièces.
Ne convient pas aux enfants de moins de 3 ans.

⚠ ADVERTENCIA:
PELIGRO DE ATRAGANTARSE-Piezas pequeñas.
No se recomienda para niños menores de 3 años.

AD BEFORE PLAYING WITH TOY

yone with toy, 3) poke anyone with toy,
y.
hinged parts of toy.

⚠ AVERTISSEMENT: LIRE AVANT DE JOUER AVEC LE JOUET

- **Ne pas:** 1) Pointer le jouet sur quelqu'un, 2) Frapper quelqu'un avec le jouet, 3) Piquer quelqu'un avec le jouet, 4) Lancer le jouet sur quelqu'un, 5) Marcher sur le jouet.
- **Faire attention** de ne pas se pincer les doigts avec les parties articulées du jouet.

⚠ PRECAUCIÓN: LEER ANTES DE JUGAR CON EL JUGUETE

- **No:** 1) Apuntar a nadie con el juguete, 2) Golpear a nadie con el juguete, 3) Pinchar a nadie con el juguete, 4) Intentar pegarle a nadie con el juguete, 5) Pisar el juguete.
- **Tener cuidado** de no apretarse los dedos con las piezas a bisagra del juguete.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.
L'article exclusif au Web est disponible lorsque tu te connectes avec ta figurine Gotchi.
El artículo exclusivo de Internet se encuentra disponible cuando abres una sesión con tu Figura Gotchi.

GAMES/JEUX/JUEGOS

Earn Gotchi Points!
Gagne des points Gotchi !
¡Gana puntos Gotchi!

1. TRAMPOLINE/TRAMPOLINE/TRAMPOLÍN

Jump and get the balloons.
Saute et attrape les ballons.
Salta y atrapa los globos.

A) Move left/Se déplacer vers la gauche/Mover hacia la izquierda
B) Jump/Sauter/Saltar
C) Move right/Se déplacer vers la droite/Mover hacia la derecha

2. FARMKEEPER/CULTIVATEUR/GRANJERO

Move the target and pick the plants.
Bouge la cible et cueille les plantes.
Mueve el objetivo y recoge las plantas.

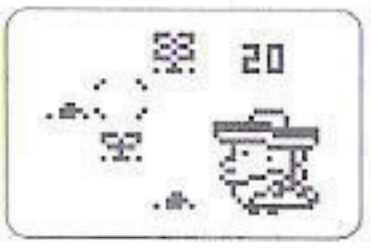

A) Up/Haut/Hacia arriba
B) Pick/Cueillir/Recoger
C) Down/Bas/Hacia abajo

SHOP/BOUTIQUE/TIENDA

MEXICAN RESTAURANT/RESTAURANT MEXICAIN/ RESTAURANTE MEXICANO

You can buy 11 items in this shop.
Tu peux acheter 11 articles dans cette boutique.
Puedes comprar 11 artículos en esta tienda.

You will only see 4 items out of 11 items, so please check back often for more items.
Tu ne verras que 4 articles sur 11 alors, reviens souvent pour voir plus d'articles.
Sólo verás 4 artículos de los 11 artículos, así que por favor vuelve a chequear a menudo para ver más artículos.

ITEM/ARTICLE/ARTÍCULO

You can use the items you bought/Tu peux utiliser les articles que tu as achetés./Puedes usar los artículos que compraste.
Choose the item you want to use from the item box/Choisis l'article que tu veux utiliser à partir de la boîte d'articles/Escoge el artículo que desees utilizar de la caja de artículos. If you have bought items from your attached Tama Character Figure, you will be able to wear or play with the items you have bought by going to the Item Box. To access your Item Box, select the "Gotchi Figure" icon with Button (A), then press Button (B) to choose "Item". Scroll through your purchased items with Button (A) then press Button (B) to select it./Si tu as acheté des articles à ta figurine Tama, tu pourras les porter ou jouer avec les articles achetés en allant à la boîte d'articles. Pour accéder à ta boîte d'articles, sélectionne l'icône de "figurine Gotchi" avec le bouton (A), puis appuie sur le bouton (B) pour choisir "Item". Défile pour voir tes achats en te servant du bouton (A), puis appuie sur le bouton (B) pour sélectionner l'article./Si has comprado artículos de tu Figura del Personaje Tama adjunta, podrás usar o jugar con los artículos que hayas comprado yendo a la Caja de Artículos. Para entrar a tu Caja de Artículos, selecciona el icono de la Figura Gotchi "Gotchi Figure" con el Botón (A) y luego oprime el Botón (B) para escoger el artículo "Item". Pasa por los artículos comprados utilizando el Botón (A) y luego oprime el Botón (B) para seleccionarlo.

CHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © 2004-2010 Bandai, WiZ. © Avenue, Cypress, California 90630. MC & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go et les logos, noms et ressemblances distinctives y decoraciones pueden variar. Distribuido por Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. MR y © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI -2010. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Todos los derechos reservados.

BANDAI®MD

Ages 8 and up.
Asst. #26650
Item #26655

Gotchi Figures QUICK START GUIDE

TAMATOWN™
by Tamagotchi®

Visit TamaTown.com for complete instructions.

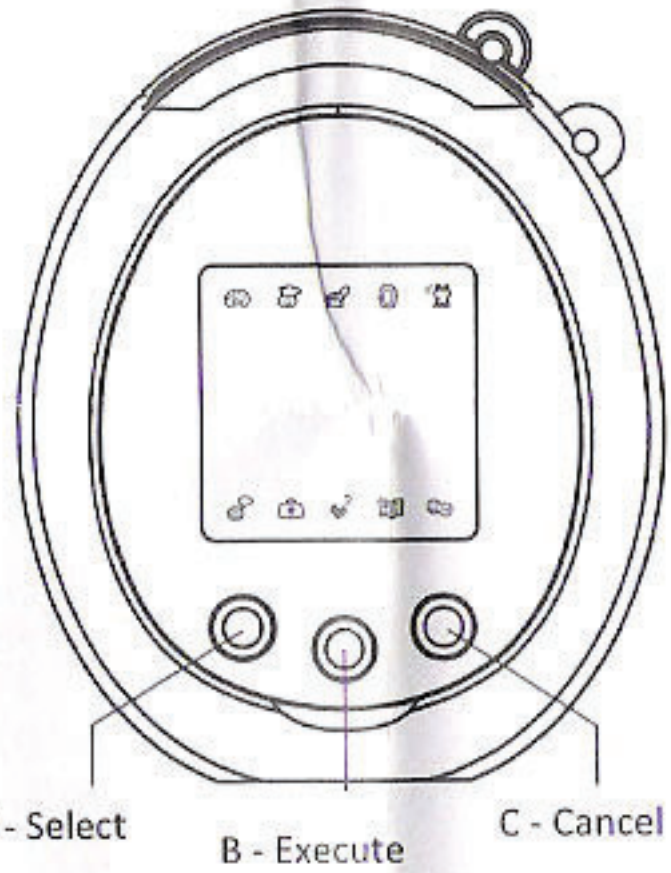

GOTCHI FIGURE

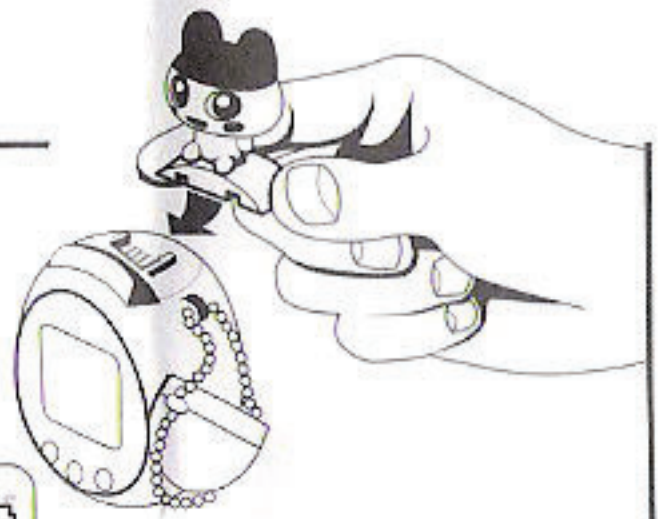

1. Slide Gotchi figure onto your Tama-Go

2. Go to "Gotchi Figure" icon

   If the character has a shop

   If the character has a restaurant

3. When you remove your Gotchi Figure, you will see 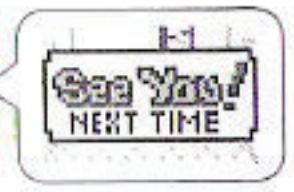

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Av
TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive pr

⚠CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hinged parts of toy.

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.

Games

Earn Gotchi Points!

1. PING PONG

Hit the ball with your racket.

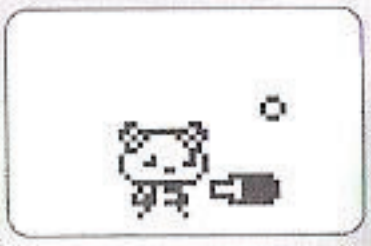

A) Move left
B) To flip left/right
C) Move right

2. MANHOLE

Open the hole to get the items. Do not get a snake.

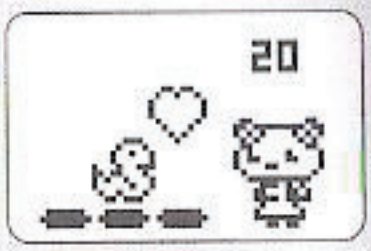

A) Open left hole
B) Open middle hole
C) Open right hole

Shop

FLOWER SHOP

You can buy 9 items in this shop.
You will only see 4 items out of 9 items so please check back often for more items.

Item

You can use the items you bought.
Choose the item you want to use from the item box.

venue, Cypress, California 90630. TM & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION,
operty of Bandai. © Bandai, WiZ 2004-2010. All Rights Reserved.

Ages 6 and up.
Âge : 6 ans et plus.
Edad: 6 años y más
Asst./Surtido No. #26650
#26662

TAMATOWN™
by/de Tamagotchi®

⚠ WARN
CHOKING HAZ
parts. Not for children

⚠CAUTION: PLEASE READ
- **Do not:** 1) aim toy at anyone, 2) hit anyo
  4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hin

Gotchi Figures/Figurines Gotchi/Figuras Gotchi
QUICK START GUIDE/GUIDE DE DÉMARRAGE
GUÍA DE INICIO RÁPIDO

Visit TamaTown.com for complete instructions.
Visite TamaTown.com pour voir les instructions complètes.
Visita TamaTown.com para obtener las instrucciones completas.

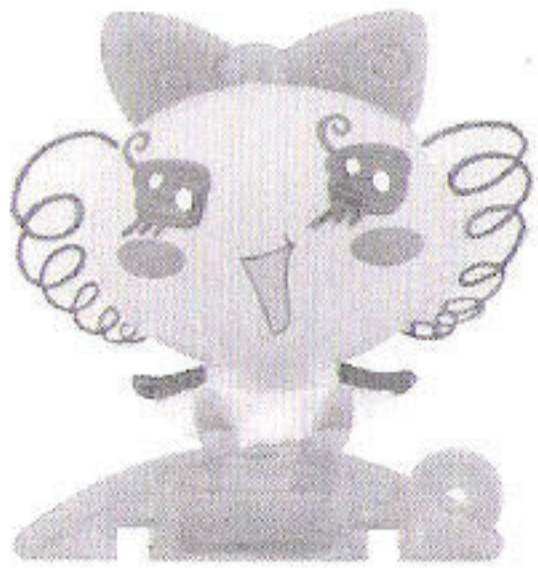

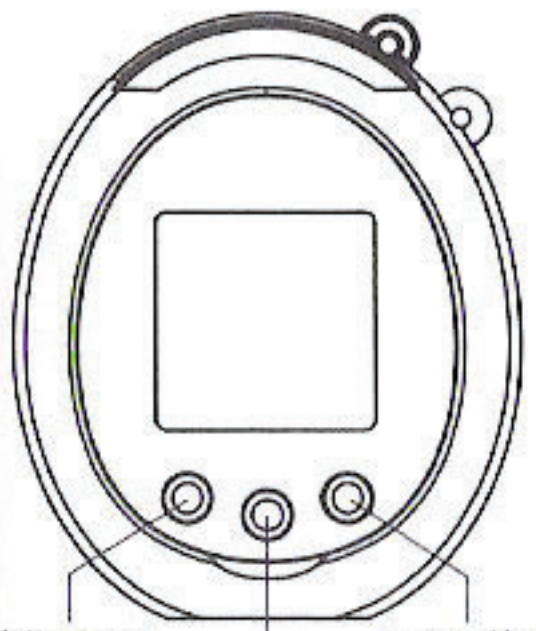

GOTCHI FIGURE/FIGURINE GOTCHI/FIGURA GOTCHI

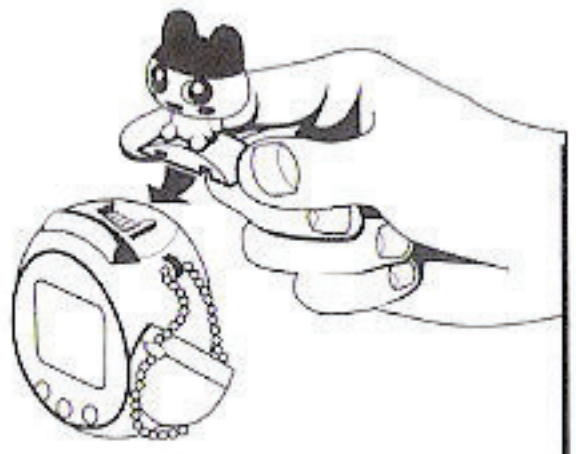

1. Slide Gotchi figure onto your Tama-Go.
   Glisse la figurine Gotchi sur ton Tama-Go.
   Desliza la figura Gotchi en tu Tama-Go.

2. Go to "Gotchi Figure" icon
   Va à l'icône de la « figurine Gotchi »
   Ve al icono de la "Figura Gotchi"

   If the character has a shop
   Si le personnage a une boutique
   Si el personaje tiene una tienda

   If the character has a restaurant
   Si le personnage a un restaurant
   Si el personaje tiene un restaurante

3. When you remove your Gotchi Figure, you will see
   Quand tu enlèveras ta figurine Gotchi, tu verras
   Cuando retires tu Figura Gotchi, verás

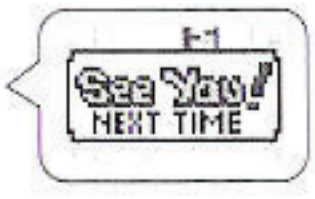

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. Bandai logo ® & © 2010 Bandai. TAMAGOTC
BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. All Rights Reserved./ Couleur, style et décoration pouvant varier. Distribué par Bandai America Incorporated, 5551 Katella
connexes appartiennent exclusivement à Bandai. © 2004-2010 Bandai, WiZ. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Tous droits réservés./ Los colores, estilos y
CONNECTION, TAMATOWN, Tama-Go y todos los logotipos y nombres asociados, así como las similitudes distintivas, son de propiedad exclusiva de Bandai. © Bandai, WiZ 2004-

NING:
ARD-Small under 3 years.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-Petites pièces.
Ne convient pas aux enfants de moins de 3 ans.

⚠ ADVERTENCIA:
PELIGRO DE ATRAGANTARSE-Piezas pequeñas.
No se recomienda para niños menores de 3 años.

BEFORE PLAYING WITH TOY

ne with toy, 3) poke anyone with toy,
ged parts of toy.

⚠ AVERTISSEMENT: LIRE AVANT DE JOUER AVEC LE JOUET

- **Ne pas:** 1) Pointer le jouet sur quelqu'un, 2) Frapper quelqu'un avec le jouet, 3) Piquer quelqu'un avec le jouet, 4) Lancer le jouet sur quelqu'un, 5) Marcher sur le jouet.
- **Faire attention** de ne pas se pincer les doigts avec les parties articulées du jouet.

⚠ PRECAUCIÓN: LEER ANTES DE JUGAR CON EL JUGUETE

- **No:** 1) Apuntar a nadie con el juguete, 2) Golpear a nadie con el juguete, 3) Pinchar a nadie con el juguete, 4) Intentar pegarle a nadie con el juguete, 5) Pisar el juguete.
- **Tener cuidado** de no apretarse los dedos con las piezas a bisagra del juguete.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.
L'article exclusif au Web est disponible lorsque tu te connectes avec ta figurine Gotchi.
El artículo exclusivo de Internet se encuentra disponible cuando abres una sesión con tu Figura Gotchi.

GAMES/JEUX/JUEGOS

Earn Gotchi Points!
Gagne des points Gotchi !
¡Gana puntos Gotchi!

1. SOUND BLOCK/BLOC SONORE/BLOQUE SONORO

Jump left/right to get to the goal.
Saute vers la gauche/la droite pour atteindre le but.
Salta hacia la izquierda/derecha para llegar a la meta.

A) Jump left/Sauter vers la gauche/Saltar hacia la izquierda
C) Jump right/Sauter vers la droite/Saltar hacia la derecha

2. SHUFFLE SHUFFLE/MÉLI-MÉLO/BARAJA BARAJA

Find the hidden item by selecting one of the boxes.
Trouve l'article caché en sélectionnant une des boîtes
Encuentra el artículo oculto seleccionando una de las cajas.

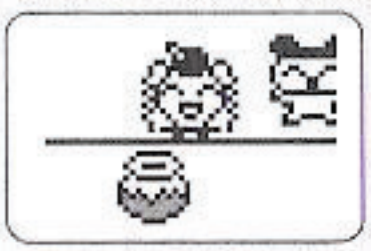

A) Select/Sélectionner/Seleccionar
B) Decide/Décider/Decidir
C) Give up/Abandonner/Abandonar

SHOP/BOUTIQUE/TIENDA

TRAVEL SHOP/BOUTIQUE DE VOYAGE/TIENDA DE VIAJES

You can buy 9 items in this shop.
Tu peux acheter 9 articles dans cette boutique.
Puedes comprar 9 artículos en esta tienda.

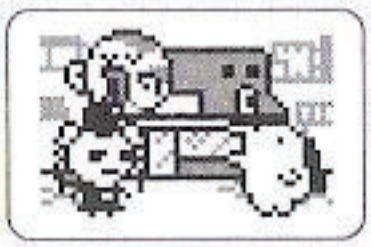

You will only see 4 items out of 9 items, so please check back often for more items.
Tu ne verras que 4 articles sur 9 alors, reviens souvent pour voir plus d'articles.
Sólo verás 4 artículos de los 9 artículos, así que por favor vuelve a chequear a menudo para ver más artículos.

ITEM/ARTICLE/ARTÍCULO

You can use the items you bought/Tu peux utiliser les articles que tu as achetés./Puedes usar los artículos que compraste.
Choose the item you want to use from the item box/Choisis l'article que tu veux utiliser à partir de la boîte d'articles/Escoge el artículo que desees utilizar de la caja de artículos. If you have bought items from your attached Tama Character Figure, you will be able to wear or play with the items you have bought by going to the Item Box. To access your Item Box, select the "Gotchi Figure" icon with Button (A) then press Button (B) to choose "Item". Scroll through your purchased items with Button (A) then press Button (B) to select it./Si tu as acheté des articles à ta figurine Tama, tu pourras les porter ou jouer avec les articles achetés en allant à la boîte d'articles. Pour accéder à ta boîte d'articles, sélectionne l'icône de "figurine Gotchi" avec le bouton (A), puis appuie sur le bouton (B) pour choisir "Item". Défile pour voir tes achats en te servant du bouton (A), puis appuie sur le bouton (B) pour sélectionner l'article./Si has comprado artículos de tu Figura del Personaje Tama adjunta, podrás usar o jugar con los artículos que hayas comprado yendo a la Caja de Artículos. Para entrar a tu Caja de Artículos, selecciona el icono de la Figura Gotchi "Gotchi Figure" con el Botón (A) y luego oprime el Botón (B) para escoger el artículo "Item". Pasa por los artículos comprados utilizando el Botón (A) y luego oprime el Botón (B) para seleccionarlo.

HI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © 2004-2010 Bandai, WiZ. © Avenue, Cypress, California 90630. MC & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go et les logos, noms et ressemblances distinctives decoraciones pueden variar. Distribuido por Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. MR y © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI 2010. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Todos los derechos reservados.

Ages 6 and up.
Âge : 6 ans et plus.
Edad: 6 años y más
Asst./Surtido No. #26650
#26660

TAMATOWN™
by/de Tamagotchi

⚠ WAR
CHOKING HAZ
parts. Not for childre

⚠CAUTION: PLEASE REA
- **Do not:** 1) aim toy at anyone, 2) hit an
4) swing toy at anyone, 5) step on toy
- **Be careful** not to pinch fingers with h

Gotchi Figures/Figurines Gotchi/Figuras Gotchi
QUICK START GUIDE/GUIDE DE DÉMARRAGE
GUÍA DE INICIO RÁPIDO

Visit TamaTown.com for complete instructions.
Visite TamaTown.com pour voir les instructions complètes.
Visita TamaTown.com para obtener las instrucciones completas.

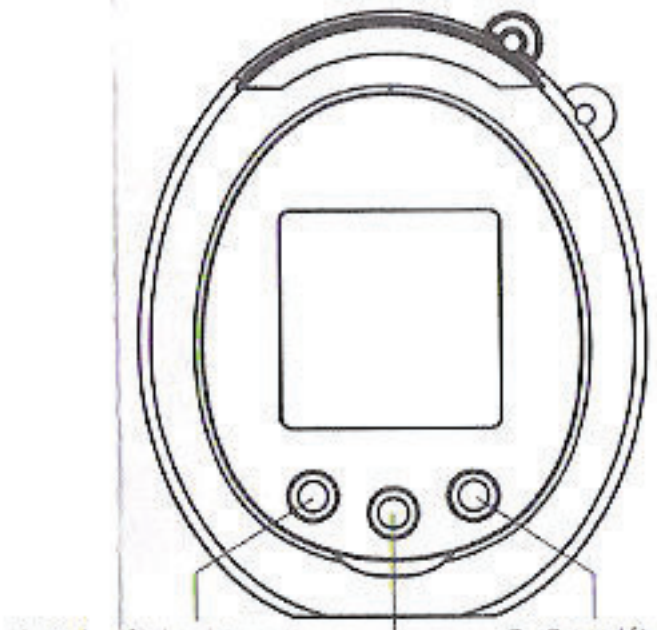

GOTCHI FIGURE/FIGURINE GOTCHI/FIGURA GOTCHI

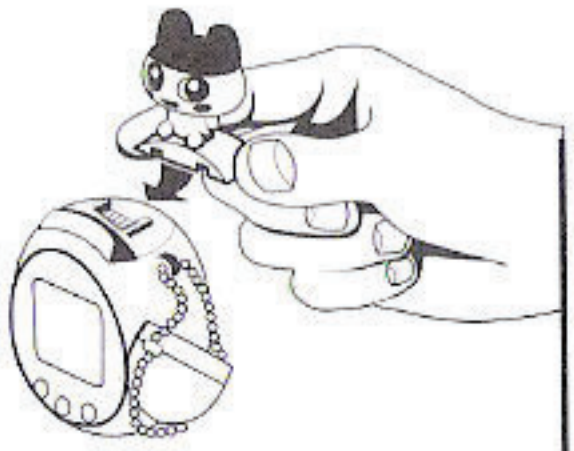

1. Slide Gotchi figure onto your Tama-Go.
   Glisse la figurine Gotchi sur ton Tama-Go.
   Desliza la figura Gotchi en tu Tama-Go.

2. Go to "Gotchi Figure" icon
   Va à l'icône de la « figurine Gotchi »
   Ve al icono de la "Figura Gotchi"

If the character has a shop
Si le personnage a une boutique
Si el personaje tiene una tienda

If the character has a restaurant
Si le personnage a un restaurant
Si el personaje tiene un restaurante

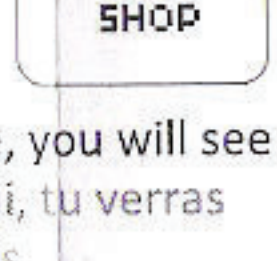

3. When you remove your Gotchi Figure, you will see
   Quand tu enlèveras ta figurine Gotchi, tu verras
   Cuando retires tu Figura Gotchi, verás

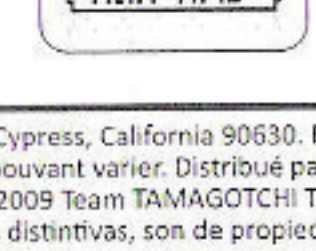

Color, style and decoration may vary. Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. Bandai logo ® & © 2010 Bandai. TAMAGO
BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. All Rights Reserved./ Couleur, style et décoration pouvant varier. Distribué par Bandai America Incorporated, 5551 Kate
connexes appartiennent exclusivement à Bandai. © 2004-2010 Bandai, WiZ. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Tous droits réservés./ Los colores, estilo
CONNECTION, TAMATOWN, Tama-Go y todos los logotipos y nombres asociados, así como las similitudes distintivas, son de propiedad exclusiva de Bandai. © Bandai, WiZ 20

NING:
ZARD-Small
n under 3 years.

⚠ AVERTISSEMENT:
RISQUE D'ÉTOUFFEMENT-Petites pièces.
Ne convient pas aux enfants de moins de 3 ans.

⚠ ADVERTENCIA:
PELIGRO DE ATRAGANTARSE-Piezas pequeñas.
No se recomienda para niños menores de 3 años.

AD BEFORE PLAYING WITH TOY

yone with toy, 3) poke anyone with toy,
inged parts of toy.

⚠ AVERTISSEMENT: LIRE AVANT DE JOUER AVEC LE JOUET

- **Ne pas:** 1) Pointer le jouet sur quelqu'un, 2) Frapper quelqu'un avec le jouet, 3) Piquer quelqu'un avec le jouet, 4) Lancer le jouet sur quelqu'un, 5) Marcher sur le jouet.
- **Faire attention** de ne pas se pincer les doigts avec les parties articulées du jouet.

⚠ PRECAUCIÓN: LEER ANTES DE JUGAR CON EL JUGUETE

- **No:** 1) Apuntar a nadie con el juguete, 2) Golpear a nadie con el juguete, 3) Pinchar a nadie con el juguete, 4) Intentar pegarle a nadie con el juguete, 5) Pisar el juguete.
- **Tener cuidado** de no apretarse los dedos con las piezas a bisagra del juguete.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.
L'article exclusif au Web est disponible lorsque tu te connectes avec ta figurine Gotchi.
El artículo exclusivo de Internet se encuentra disponible cuando abres una sesión con tu Figura Gotchi.

GAMES/JEUX/JUEGOS

Earn Gotchi Points!
Gagne des points Gotchi !
¡Gana puntos Gotchi!

1. KNOCK A NOTE/FRAPPE UNE NOTE/GOLPEA UNA NOTA

Select and hit the falling notes.
Sélectionne et frappe les notes qui tombent.
Selecciona y golpea las notas que caen.

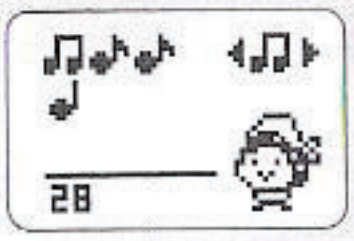

A) Select/Sélectionner/Seleccionar
B) Hit/Frapper/Golpear

NOTE:
You can only hit the note which is the lowest position.

REMARQUE :
Tu peux seulement frapper la note la plus basse.

LA NOTA:
Sólo puedes golpear la nota que esté en la posición más baja.

2. CANDIES/BONBONS/DULCES

Match the falling candies by scrolling the panel.
Assortis les bonbons qui tombent en faisant défiler le panneau.
Has corresponder los dulces que caen desplazándote por el panel.

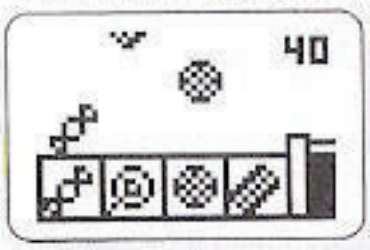

A) Scroll left/Défiler vers la gauche/Desplazarse hacia la izquierda
C) Scroll right/Défiler vers la droite/Desplazarse hacia la derecha

SHOP/BOUTIQUE/TIENDA

BREAD SHOP/BOULANGERIE/PANADERÍA

You can buy 11 items in this shop.
Tu peux acheter 11 articles dans cette boutique.
Puedes comprar 11 artículos en esta tienda.

You will only see 4 items out of 11 items, so please check back often for more items.
Tu ne verras que 4 articles sur 11 alors, reviens souvent pour voir plus d'articles.
Sólo verás 4 artículos de los 11 artículos, así que por favor vuelve a chequear a menudo para ver más artículos.

ITEM/ARTICLE/ARTÍCULO

You can use the items you bought/Tu peux utiliser les articles que tu as achetés./Puedes usar los artículos que compraste.
Choose the item you want to use from the item box/Choisis l'article que tu veux utiliser à partir de la boîte d'articles/Escoge el artículo que desees utilizar de la caja de artículos. If you have bought items from your attached Tama Character Figure, you will be able to wear or play with the items you have bought by going to the Item Box. To access your Item Box, select the "Gotchi Figure" icon with Button (A) then press Button (B) to choose "Item". Scroll through your purchased items with Button (A) then press Button (B) to select it./Si tu as acheté des articles à ta figurine Tama, tu pourras les porter ou jouer avec les articles achetés en allant à la boîte d'articles. Pour accéder à ta boîte d'articles, sélectionne l'icône de "figurine Gotchi" avec le bouton (A), puis appuie sur le bouton (B) pour choisir "Item". Défile pour voir tes achats en te servant du bouton (A), puis appuie sur le bouton (B) pour sélectionner l'article./Si has comprado artículos de tu Figura del Personaje Tama adjunta, podrás usar o jugar con los artículos que hayas comprado yendo a la Caja de Artículos. Para entrar a tu Caja de Artículos, selecciona el icono de la Figura Gotchi "Gotchi Figure" con el Botón (A) y luego oprime el Botón (B) para escoger el artículo "Item". Pasa por los artículos comprados utilizando el Botón (A) y luego oprime el Botón (B) para seleccionarlo.

OTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all related logos, names and distinctive likenesses are the exclusive property of Bandai. © 2004-2010 Bandai, WiZ. © lla Avenue, Cypress, California 90630. MC & © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go et les logos, noms et ressemblances distinctives s y decoraciones pueden variar. Distribuido por Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. MR y © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI 04-2010. © BANDAI, WiZ/TV TOKYO, 2009 Team TAMAGOTCHI TV. Todos los derechos reservados.

BANDAI®MD

Ages 8 and up.
Asst. #26650
Item #26656

Gotchi Figures QUICK START GUIDE

TAMATOWN™
by Tamagotchi®

Visit TamaTown.com for complete instructions.

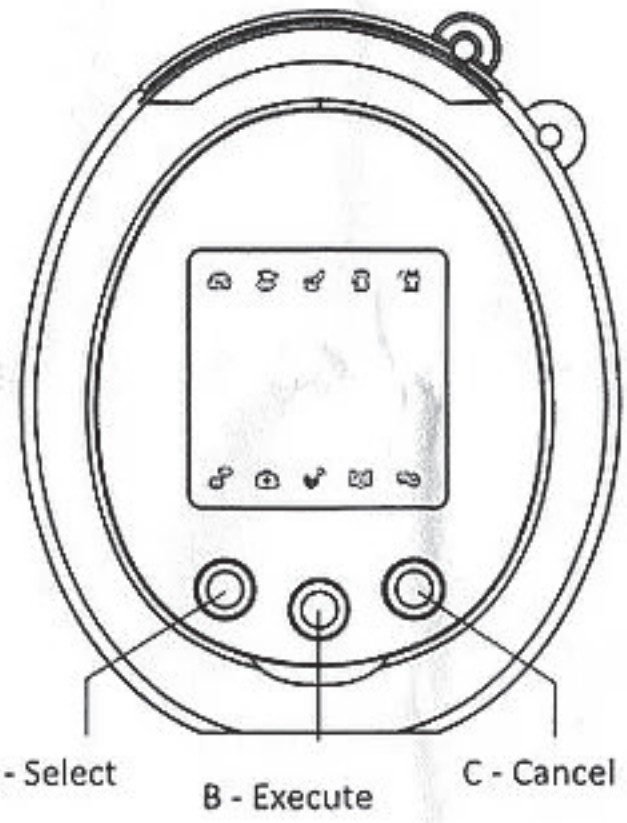

GOTCHI FIGURE

1. Slide Gotchi figure onto your Tama-Go

2. Go to "Gotchi Figure" icon

   If the character has a shop

   If the character has a restaurant

3. When you remove your Gotchi Figure, you will see

Distributed by Bandai America Incorporated, 5551 Katella Avenue, Cypress, California 90630. TM &
related logos, names and distinctive likenesses are the exclusive property of Bandai. © Bandai, Wi

⚠CAUTION: PLEASE READ BEFORE PLAYING WITH TOY

- **Do not:** 1) aim toy at anyone, 2) hit anyone with toy, 3) poke anyone with toy, 4) swing toy at anyone, 5) step on toy.
- **Be careful** not to pinch fingers with hinged parts of toy.

⚠ WARNING:
CHOKING HAZARD-Small parts. Not for children under 3 years.

WWW.TAMATOWN.COM

Web exclusive item is available when you login with your Gotchi figure.

Games

Earn Gotchi Points!

1. MONSTER BEATER

Move the target to attack the monster.

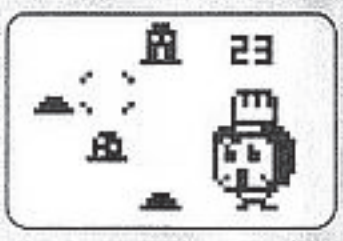

A) Move up
B) Attack
C) Move down

2. SHAPE SHOOTER

Select and shoot the item that is falling down.

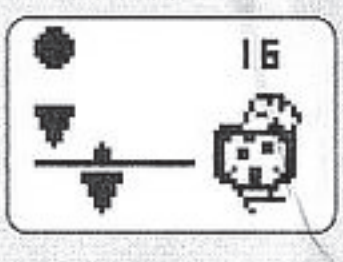

A) Shoot at left
B) Select
C) Shoot at right

Shop

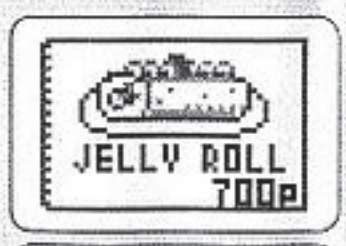

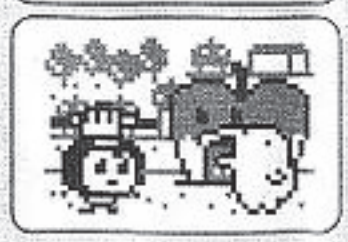

SWEET RESTAURANT

You can buy 9 items in this restaurant.
You will only see 4 items out of 9 items so please check back often for more items.

& © 2010 Bandai. TAMAGOTCHI, TAMAGOTCHI CONNECTION, TAMATOWN, Tama-Go and all
Z 2004-2010. All Rights Reserved.